

GE Power Management — Control System

GE ED&C Home Search ED&C | GE ED&C Power Management Home | GE ED&C PMCS Home

Technical Note #9

Historical Logging/Trending

GE Power Management Control System

Description Software				
Hardware	Subjects Instructions for setting up historical loss and trands			
Operation	Subject: Instructions for setting up instorical logs and trends.			
Product Support	Applies To: PMCS systems using Wonderware Intouch			
Operator Interfaces				
F A O's	1. Select Trends from the wizard selection tool box.			
App Notes				
Download Area	Wizard Selection Dialog Box			
Manuals				
Useful	GE Lame Faceplates			
Information	GE Tabulai Screens			
Glossary of Terms	GE Small Faceplates			
Useful Links	LiE Miscellaneous			
Search Tech support	GE Elevation Wizards			
We want to hear	GE Floorplan Wizards			
from you:	Buttons			
Service and Support				
<u>iocations</u> around the world.	Panels			
	Lights			
	Buntime Tools			
	Sliders			
	Switches Text Displays			
	I rends			
	Wizard Description			
Hist Trend with Left/Right Scooters (showing time) and EU Scale				
	Short Comment			
	Select Cancel Add to Loolbox Hemove from Loolbox			

2. Select historical trending from the selection.

Click on the window to display the historical logging chart. Double click on the historical logging chart will display the dialog box shown. Note: A dialog box shows up as shown below:

	Historical Trend Chart Wizard				
The Trend Wiz If the tags that Click Suggest	and requires 2 Tags to operate. Er t you enter below do not exist, the V for suggestions on names.	iter these below. Wizard will create them.	<u>D</u> K Cancel		
Hist Trend:	HistTrend2	(Hist⊺rend)	Suggest		
Pen Scale:	HistTrend2PenScale	(Memory Integer)	Values		
The Pen Scale tag is used to display Engineering Units. If you also use the Trend Legend Wizard, specify this same Pen Scale tagname there as well. Times Pen: View Is Burphing - You Cannot Configure Pens Colors: Chart Culus					
1			Chart:		
2			Darder:		
3			Values:		
4			Times:		
,					

- 3. Enter the Hist Trend and pen scale boxes and hit ok.
- 4. Select the scooter bar from the wizard selection control box trend as shown below and repeat step 2 & 3
- 5. Go to window maker Special Tagname directory and select the particular tag you want to do historical logging.

Dictionary - Tagname Definition	Details O Alarms O Both O None
<u>New Restore D</u> elete Sa <u>v</u> e	<u> </u>
Tagname: EPM_337_KW_TOTAL	<u>Iype:</u> DDE Real
<u>G</u> roup: \$System	○ Read <u>o</u> nly
Comment:	
🛛 Log Data 🗌 Log Events	🗖 Retent <u>i</u> ve Value 📕 Retentive Para <u>m</u> eters

6. Enable log data

Answers to Frequently Asked Questions on Historical Logging/Trending with Wonderware Intouch

- 1. Question: How do I print a trend log? Answer: Press shift & print-screen. Open an excel spread sheet, select edit and then paste. You can now use excel print function to print the trend diagram.
- 2. Question: Can more than one trend window be implemented for the same device? If yes, how do I set-up this configuration?

Answer: By selecting a second historical trending chart. User can paste it next to the already

existing trend chart and select the tagnames for the same device.

3. Question: How do I select a tagname?

Answer: Go to Window Maker and click on Special, select Tagname Directory and then select the particular Tagname that you want to execute historical trending for.

4. Question: What are meant by 'Initial Value, Deadband, Min EU, and Max Raw?

Answer: All DDE type tagnames receive their values from other Windows applications such as Excel. These are "raw" values. When a tagname is defined in the tagname directory, you must enter values for the maximum and minimum. These are called the maximum and minimum raw. Intouch does not display raw values but instead displays engineering units or EU. When a tagname is defined in the tagname directory, values for Min EU and Max EU are used to scale the raw value to the displayed. Deadband is used for alarms. It is the tag value that must drop below the alarm value before it is taken out of alarm. The initial value is the value stored in the tagname when the first loaded in this field.

5. Question: Do I input data in the Windows mentioned in question #4? Answer: Yes

Keywords

historical trending, logging, tagname

Related Notes

none

Last Revised 10/9/96

GE home page

Search ED&C| GE home page| GE news| GE business finder| GE products & services