

## Technical Note #68

### Using the EPM 7700's Xpress Card as an Ethernet Gateway with PMCS

**Subject:** This appnote covers how to configure the Xpress card and the DialOut/IP software for use Express card as an Ethernet -> RS485 gateway with the GE32MODB server

**Applies To:** PMCS 6.0b, Xpress Card, 7700

#### Summary:

Configuration information for Tactical Software (www.tactical-sw.com) DialOut/IP software and 7 Xpress Card.

#### I. Xpress Card Configuration

The following information can be configured through the 7700's Modular Graphics Terminal (MGT) information on how to use the MGT refer to the 7700 ION Installation and Operation Manual.

1. Set 7A50 to Ether Gate protocol for COM 2 use. Set 7A51 to Ether Gate protocol for COM 3 use.
2. Set 7A4D to desired baud rate to configure COM 2 of the Xpress Card. Set 7A4E to desired baud rate to configure COM 3 of the Xpress Card.

#### II. Dialout/IP configuration

NOTE: DialOut/IP is a comm port redirector. It intercepts messages from the GE32MODB server 1 the comm ports and redirects them to a TCP/IP address and Port Number. **The DialOut/IP version 2.0 or greater.** The comm ports that are being redirected must not be actual computer COMM port server computer is using comm 1 and 2 for the serial ports on the back of the computer, Dial/Out software will redirect these.

1. After installing the Dialout/IP Software you will be prompted to select ports to be redirected. Select the ports that will be used solely by PMCS.

[Home](#)

[Product Information](#)

[Case Studies](#)

[FAQs](#)

[Download Area](#)

['Virtual' Demo](#)

[Glossary of Terms](#)

[Links](#)

[Contact Us](#)

[Search](#)


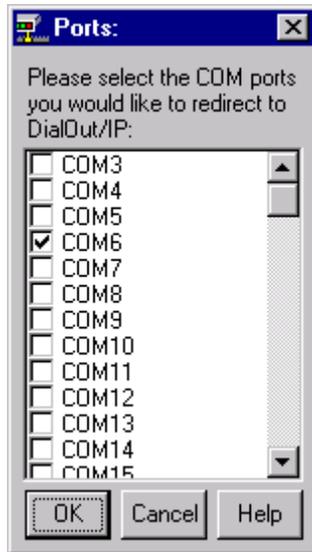


Figure 1: Choosing ports for redirection

2. For each of the PMCS ports enter the IP address of the Xpress card (1), the TCP Port Number (2 click on the Raw TCP Connection (3). **The TCP port number should correspond 7802 for COM 7803 for COMM 3 on the Xpress card. COMM 1 cannot be accessed by PMCS.** Ensure that no compatibility options are selected. Next, on the configure menu, unclick the Display Server Connection Errors.

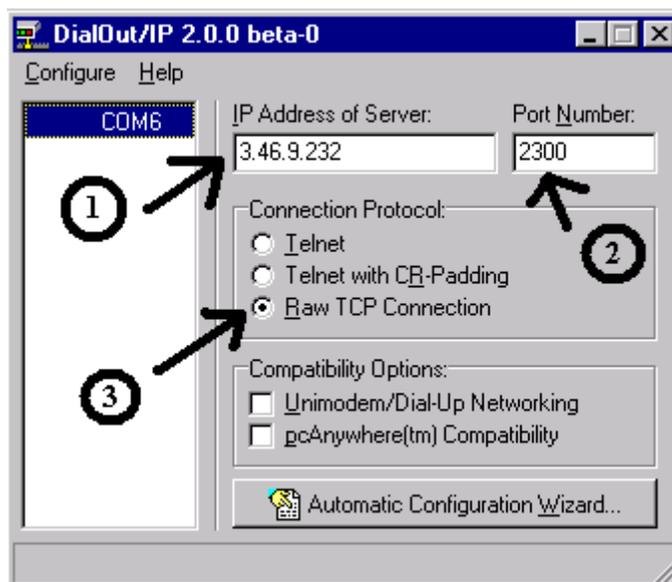

For more information on DialOut/IP including troubleshooting, refer to the html documentation in with the DialOut/IP software.

### III. Configuring the PMCS Server Software

The PMCS server software should be set up normally, **the GE32MODB server must be used, GE will not work.** Define the redirected ports in the server as a normal comm port setup. The baud rate and parity can all be set to standard configuration values.

-

Keywords

Xpress Card, EPM 7700, DialOut/IP

Related Notes

Xyplex Appnote

Last Revised 5/27/99

[GE home page](#)

[GE Industrial Systems home page](#)

-

[Search GE](#) | [GE home page](#) | [GE news](#) | [GE business finder](#) | [GE products & services](#)  
[About Us](#) | [What's New](#) | [Products & Services](#) | [Publications](#)  
[Process Solutions](#) | [Year 2000](#) | [Contact Us](#)

[Legal Disclaimer](#)