

IC5882-A300 AND -A400 RESET RELAYS

GENERAL

IC5882-A300 Relay

This reset relay is for use with the IC5882-34 and IC2824-34 overload relays. The relay consists of a solenoid-operated lever which engages the reset rod of the overload relay.

IC5882-A400 Relay

This reset relay is for use with the IC5882-C overload relays.

SERVICING

IC5882-A300 Relay

To change the coil on the relay, remove the four mounting bolts (1), Fig. 1, and replace the coil.

IC5882-A400 Relay

To change the relay coil, remove the screws (1), Fig. 1, and pin (2) and replace coil. To change spring (3), remove nut (4) and replace spring.

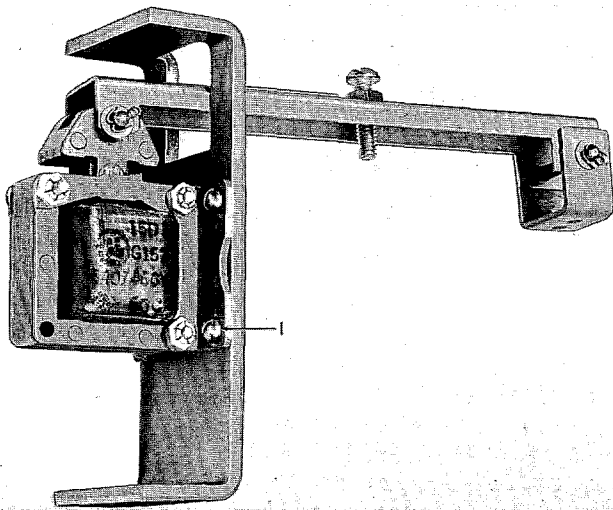


Fig. 1. IC5882-A300 reset relay

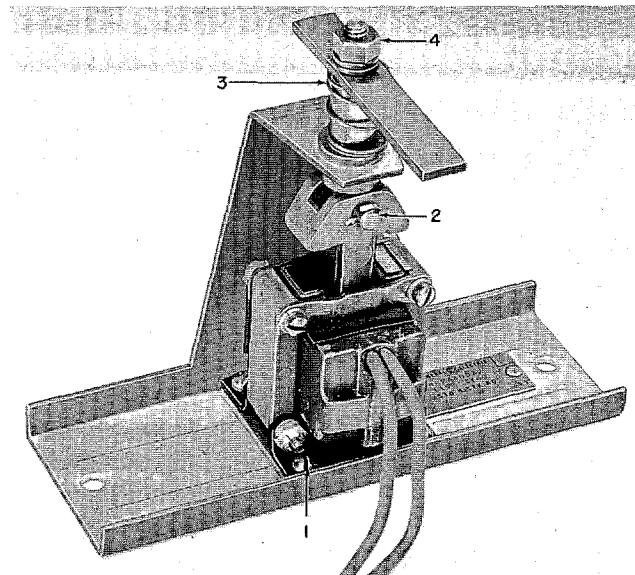


Fig. 2. IC5882-A400 reset relay

INDUSTRY CONTROL DEPARTMENT

GENERAL  **ELECTRIC**

Salem, Va.

