



INSTRUCTIONS

GEK-45374

TYPE SLA51F

SOLID STATE AUXILIARY RELAY FOR TRANSMISSION LINE PROTECTION

POWER SYSTEMS MANAGEMENT DEPARTMENT

GENERAL  ELECTRIC

PHILADELPHIA, PA.

C O N T E N T S

DESCRIPTION 3

APPLICATION 3

RATINGS 3

BURDENS 4

OPERATING PRINCIPLES 4

 A. LOGIC CIRCUIT 4

 B. CONTACT CONVERTERS 4

 C. DATA MONITORING POINTS 4

 D. CHANNEL INTERFACE 4

SETTINGS 4

CONSTRUCTION 5

RECEIVING, HANDLING AND STORAGE 5

INSTALLATION TESTS 6

 CAUTION 6

 GENERAL 6

 OPERATIONAL CHECKS 6

 TEST CARD ADAPTER 6

 TIMER ADJUSTMENTS & TESTS 6

 CONTACT CONVERTER TESTS 7

 ISOLATION INTERFACE TESTS 7

 OVERALL EQUIPMENT TESTS 7

MAINTENANCE 7

 PERIODIC TESTS 7

 TROUBLE SHOOTING 8

 SPARE PARTS 8

DESCRIPTION

The SLA51F relay is an auxiliary logic relay designed to be used in directional comparison ON-OFF carrier schemes. The relay contains the necessary logic to interpret output signals from associated measuring functions and translate them to an appropriate auxiliary output and tripping relay. In addition to the SLA51F relay, appropriate ground and phase relays plus a power supply and auxiliary tripping relay are required to complete a particular relaying scheme.

The type SLA51F relay is packaged in a four rack unit enclosed metal case. The relay is suitable for mounting in a 19 inch rack and the mounting and outline dimensions are shown in Figure 1. Internal connections for the SLA51F relay are shown in Figure 2, and the component and card locations are shown in Figure 3.

APPLICATION

The SLA51F relay is designed to operate in conjunction with appropriate phase and ground relays in a directional comparison ON-OFF carrier blocking scheme.

Protection features required in a relaying scheme often vary from scheme to scheme and it is sometimes desirable to provide certain features initially with the scheme or to provide features so that they may be added at a later date in the field. To this end, the SLA51F design has incorporated circuit flexibility to permit implementation of certain optional features. Printed circuit cards L108 and T102, shown dotted in Figure 2, are used whenever out-of-step detection is required. Matrix blocks "R", "Y", "V", "G", and "B", each with a number of points, are provided in all SLA51F relays to permit various logic arrangements to be made simply by connecting jumper leads between appropriate points. For example, a jumper between G6 and B5, shown dotted in Figure 2, will allow the out-of-step detection option to block all pilot tripping by applying the NOT input to AND7. On the other hand, jumpering between G6 and B6 will block reclosing by applying the NOT input to the appropriate AND function in the associated SLAT tripping relay. These examples can best be understood by referring to the overall logic diagram and instruction books supplied with a particular relaying scheme.

Various points in the logic can be monitored by providing jumpers from any of the available matrix points to plug 411 located on the rear of the SLA51F relay. This is further described in paragraph "C", "Data Monitoring Points", under the section headed OPERATING PRINCIPLES.

For the specific options and the logic arrangement supplied with a particular scheme, refer to the logic diagram and logic descriptive writeup supplied with that scheme. If it is desired to make logic changes at a later date, the diagrams and instruction books supplied with a particular scheme should be studied to determine the means for implementing the changes. If, after study of the diagrams, further assistance is required, contact the nearest General Electric District Sales Office.

There is no measuring functions to be set in the SLA51F relay, but there is included certain timers that must be set in accordance with the demands of the particular system to be protected. Refer to the section under SETTINGS for a description of these timers and for suggestions to be used in making the settings. There is also a link on the back of the relay which may connect one input of AND3 to connection plug lead 73 or to +15VDC. See logic description for application.

RATINGS

The Type SLA51F relay is designed for use in an environment where the air temperature outside the relay case does not exceed -20°C or +65°C.

The Type SLA51F relay requires ± 15 VDC power source which can be obtained from a Type SSA power supply.

Each contact converter in this relay has a link for selecting the proper voltage for the coil circuit of the contact converter. The three possible voltages are 48 VDC, 125 VDC, and 250 VDC.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

BURDENS

The SLA51F relay presents a burden of 220 ma to the +15 VDC supply of the Type SSA power supply.

Each contact converter, when energized, will draw approximately 10 ma from the station battery, regardless of tap setting.

OPERATING PRINCIPLESA. LOGIC CIRCUIT

The functions of the Type SLA51F relay involve basic logic (AND, OR, and NOT) where the presence or absence of signals, rather than their magnitude, controls the operation. Signals are measured with respect to a reference bus accessible at TPI. In general, a signal below 1 VDC represents an OFF or LOGIC ZERO condition; an ON or LOGIC ONE condition is represented by a signal of approximately +15 VDC.

The symbols used on the internal connection diagram (Figure 2) are explained by the legend shown in Figure 4.

The matrix block options shown on the internal connections of the SLA51F relay are provided at the factory. The connections are shown on the associated overall logic and are listed on the associated option chart. A sample option chart for the Type SLA51F relay is shown in Figure 5.

B. CONTACT CONVERTERS

The purpose of this function is to convert a contact operation into a signal that is compatible with the logic circuit of the Type SLA51F relay. These contact converters are labeled CC1 and CC2.

CC1 - Contact converter 1 is energized by an external contact to stop carrier transmission.

CC2 - Contact converter 2, when energized, prevents relay carrier tripping and relay control of carrier but permits auxiliary control of carrier.

C. DATA MONITORING POINTS

Type SLA51F relay has provisions to provide data monitoring outputs. The data monitoring (DLA) points are selected on the matrix blocks and are listed on the option chart. Any matrix block points which are not used for logic connections may be monitored. Key points in the logic have more than one matrix point to allow both logic and monitoring connections. A data logging amplifier (DLA) relay is used to translate these logic signals into usable outputs.

D. CHANNEL INTERFACE

The logic of the Type SLA51F relay includes an isolation interface (Figure 6) between the relays in the scheme and the associated channel. The circuitry of the isolation interface provides a signal path but maintains metallic isolation. This feature makes it possible to maintain isolation between the DC supply used for the relays and that employed by the channel.

When pins 9 and 10 are both connected to relay reference, a metallically separate positive logic signal appears at pin 11 with respect to 12. The output from the isolation interface is a 5 VDC, 20 ma signal.

SETTINGS

There are two timers in the SLA51F relay that may require field adjustment.

The 3/50 timer is part of the comparer-integrator scheme. The normal three millisecond pickup setting is intended to provide coordination between receiver input and the MT input to the comparer AND7.

The pickup setting allows for the transmitter-receiver operating time plus the signal propagation time. A safety margin of at least one (1) millisecond should be added when setting the pickup of this timer. For longer transmitter-receiver operating times, such as with narrow band carrier, a longer pickup time should be considered. Long transmission lines (longer signal propagation time) may also require that the pickup setting be increased. It should be remembered that tripping will be delayed in accordance with the pickup setting of this timer. The purpose of the reset delay of this timer is to hold off carrier for some time after tripping and so ensure that the remote relay will have ample time to operate.

The 2.5/16 timer in the SLY and A/40 timer in the SLA51F are part of the out-of-step detection scheme. The 2.5/16 timer forms a "tomato" (outer) characteristic; thus the distance a swing must travel before the MHO (inner) characteristic is encountered is determined by the pickup setting of this timer. The A/40 timer is used to measure the time of travel between the outer and inner characteristic. An out-of-step condition will be detected when both timers are adjusted properly. The setting of both timers should be based on the results of system studies.

Further details for setting these timers can be found in the logic description provided with each static relaying scheme.

CONSTRUCTION

The SLA51F relay is packaged in an enclosed metal case with hinged front covers and removable top cover. The outline and mounting dimensions of the case and the physical location of the components are shown in Figures 1 and 3 respectively.

The SLA51F relay contains printed circuit cards identified by a code number such as A111, T102, L104 where A designates auxiliary function, T designates time delay function, and L designates logic function. The printed circuit cards plug in from the front of the unit. The sockets are marked with letter designations or "addresses" (D, E, F, etc.) which appear on the guide strips in front of each socket, on the component location drawing, on the internal connection diagram and on the printed circuit card. The test points (TP1, TP2, etc.) shown in the internal connection diagram are connected to instrument jacks on a test card in position T or AT with TP1 at the top of the AT card. *TP10 is tied to +15 VDC through a 1.5K resistor. This resistor limits the current when TP10 is used to supply a logic signal to a card.

Other logic options are selected by means of taper pin jumpers and matrix blocks. These matrix blocks are located in the rear of the unit as shown in Figure 3. The green (G) matrix block has ten points in two 5 point common groups. The black (B) and violet (V) matrix blocks have 20 individual matrix points. The red (R) block has 20 points which are grouped in pairs. The yellow (Y) block has 20 points which are grouped in 10 common points; 1 to 10 are tied to +15 VDC, 11 to 20 are tied to reference. A tool for inserting and removing the taper tip jumpers is supplied with each relay.

RECEIVING, HANDLING AND STORAGE

These relays will normally be supplied as a part of a static relay equipment, mounted in a rack or cabinet with other static relays and test equipment. Immediately upon receipt of a static relay equipment, it should be unpacked and examined for any damage sustained in transit. If injury or damage resulting from rough handling is evident, file a damage claim at once with the transportation company and promptly notify the nearest General Electric Sales Office.

Reasonable care should be exercised in unpacking the equipment. If the equipment is not to be installed immediately, it should be stored indoors in a location that is free from moisture, dust, metallic chips, and severe atmospheric contaminants.

Just prior to final installation the shipping support bolt should be removed from each side of all relay units, to facilitate possible future unit removal for maintenance. These shipping support bolts are approximately 8 inches back from the relay front panel. Static relay equipment, when supplied in swing rack cabinets, should be securely anchored to the floor or to the shipping pallet to prevent the equipment from tipping over when the swing rack is opened.

INSTALLATION TESTSCAUTION

THE LOGIC SYSTEM SIDE OF THE DC POWER SUPPLY USED WITH MOD III STATIC RELAY EQUIPMENT IS ISOLATED FROM GROUND. IT IS A DESIGN CHARACTERISTIC OF MOST ELECTRONIC INSTRUMENTS THAT ONE OF THE SIGNAL INPUT TERMINALS IS CONNECTED TO INSTRUMENT CHASSIS. IF THE INSTRUMENT USED TO TEST THE RELAY EQUIPMENT IS ISOLATED FROM GROUND, ITS CHASSIS MAY HAVE AN ELECTRICAL POTENTIAL WITH RESPECT TO GROUND. THE USE OF A TEST INSTRUMENT WITH A GROUNDED CHASSIS WILL NOT AFFECT THE TESTING OF THE EQUIPMENT. HOWEVER, A SECOND GROUND CONNECTION TO THE EQUIPMENT, SUCH AS A TEST LEAD INADVERTENTLY DROPPING AGAINST THE RELAY CASE, MAY CAUSE DAMAGE TO THE LOGIC CIRCUITRY. NO EXTERNAL TEST EQUIPMENT SHOULD BE LEFT CONNECTED TO THE STATIC RELAYS WHEN THEY ARE IN PROTECTIVE SERVICE, SINCE TEST EQUIPMENT GROUNDING REDUCES THE EFFECTIVENESS OF THE ISOLATION PROVIDED.

GENERAL

If the SLA51F relay that is to be tested is installed in an equipment which has already been connected to the power system, disconnect the outputs in the associated Type SLAT relay from the system.

If SLA51F relay is supplied from the factory either mounted in a static relay equipment or as a separate unit associated with measuring relays, a Type SSA power supply, and some form of channel equipment. All relay units for a given terminal of static relaying equipment are tested together at the factory, and each unit will have the same summary number stamped on its nameplate.

In general, when a time range is indicated on the internal connection diagram, the timer has been factory set at a mid-range value. Timers should be set for the operating or reset times indicated on the associated overall logic diagram. When a time range is indicated on the overall logic diagram, the timer should be set for the value recommended for that function in the descriptive writeup accompanying the overall logic diagram. Where a setting depends upon conditions encountered on a specific application, this is so stated and the factors influencing the choice of setting are described. The procedure for checking and setting the timers is described in a later section.

OPERATIONAL CHECKS

Operation of the SLA51F unit can be checked by observing the signals at the twenty test points (TP1 to TP20) in the SLA51F, by observing the operation of the associated channel equipment, or by observing the output functions in the associated Type SLAT tripping relay. The test points are located on two test cards in positions T and AT, and are numbered 1 to 20 from top to bottom. TP1 is the reference bus for the logic circuit; TP10 is at +15 VDC. The remaining points are located at various strategic points throughout the logic as shown on the internal connection diagram (Figure 2). Test point voltages can be monitored with a portable high impedance voltmeter, the voltmeter on the test panel of the associated equipment, or an oscilloscope.

TEST CARD ADAPTER

The test card adapter provides a convenient means of gaining access to any pin of a particular card. Detailed information on the use of the test adapter card is included in the card instruction book GEK-34158.

TIMER ADJUSTMENTS AND TESTS

When the timer delay cards are to be adjusted or checked, an oscilloscope than can display two traces simultaneously and that has a calibrated horizontal sweep should be used.

In order to test the time cards it is necessary to remove the card previous to the timer (see Table I) and to place the timer card in a card adapter. The card adapter allows access to the input and output of the timer if they are not brought out on test points. The timer test circuit is shown in Figure 7. Opening the N.C. contact causes the output to step up to +15 VDC after the pickup delay of the timer. To increase the pickup time turn the upper potentiometer on the timer card clockwise; to decrease the time turn it counter-clockwise. Closing the contact causes the timer output to drop out after the reset time delay setting of card. If the timer card is provided with a variable reset delay, it can be adjusted by the lower potentiometer on the timer card (CW increases reset time).

TABLE I

TIME UNDER TEST	POSITION	REMOVE CARD IN POSITION
TL 4/40	E	C
TL 6/50	F	D
TL 25/35	M	L
TL 3/50	S	R

CONTACT CONVERTER TESTS

Operation of the contact converters can be checked by placing the contact converter card in a card adapter, after checking the voltage tap selected agrees with the station battery voltage. Connect the station DC through a switch to the appropriate pair of terminals of the terminal strip, AH, mounted on the rear of the relay. The terminal numbers and polarity of connections for each of the contact converters are shown in the internal connection diagram, Figure 2. Output of the contact converter card may be monitored between pin 8 and pin 1 (reference) on the card adapter with either a scope or meter. Closure of the switch in the test source will provide a +15 volt DC signal at pin 8 of the card adapter.

ISOLATION INTERFACE TESTS

Operation of the three functions (received carrier, transmitter control, and transmitter auxiliary stop) of the isolation interface can be checked without direct connections to the subassembly. External test connections are made to the pins of the C111 socket mounted on the rear of the unit, see Figure 3. Logic circuit test connections are made at the socket pins of the channel control card in position "AM".

Received carrier operation test connections are shown in Figure 8A. For this test do not remove channel control card in position "AM". Closure of the N.O. contact will simulate a received carrier signal and scope display will go from a logic "0" to a logic "1".

For the transmitter control and transmitter auxiliary stop checks remove the channel control card "AM" from its socket and replace it with a test card adapter and test card to gain access to the "AM" socket pins. Transmitter control test connections are shown in Figure 8B. The test contact in the open position simulates a logic "1" condition which holds off the transmitter control output of the isolation interface. Closure of the N.O. contact generates a logic "0" condition initiating a transmitter control output producing a 5-6 volt DC signal across the output loading resistor. The transmitter auxiliary stop function can be tested in a similar manner using the test connections of Figure 8C and the output again will provide a 5-6 volt DC signal across the output loading resistor.

OVERALL EQUIPMENT TESTS

After the SLA51F relay and the associated static relay units have been individually calibrated and tested for the desired settings, a series of overall operating circuit checks is advisable.

The elementary, overall logic, and logic description for the specific job will be useful for determining the overall operation of the scheme.

Overall equipment tests can be performed by applying AC current and voltages to the measuring units as specified in the instruction book for the measuring units and checking that proper outputs are obtained from the associated SLAT when the measuring units operate.

MAINTENANCE

PERIODIC TESTS

It should be sufficient to check the outputs produced at test points in the SLA51F when periodic calibration tests are made on the associated measuring units, for example, the phase and ground relays in line relaying scheme. No separate periodic tests on the SLA51F itself should be required.

TROUBLE SHOOTING

In any trouble shooting of equipment, it should first be established which unit is functioning incorrectly. The overall logic diagram supplied with the equipment shows the combined logic of the complete equipment and the various test points in each unit. By signal tracing, using the overall logic diagram and the various test points, it should be possible to quickly isolate the trouble.

A test adapter card is supplied with each static relay equipment to supplement the prewired test points on the test cards. Use of the adapter card is described in the card instruction book GEK-34158.

A dual-trace oscilloscope is a valuable aid to detailed trouble shooting, since it can be used to determine phase shift, operate and reset times as well as input and output levels. A portable dual-trace oscilloscope with a calibrated sweep and trigger facility is recommended.

SPARE PARTS

To minimize possible outage time, it is recommended that a complete maintenance program should include the stocking of at least one spare card of each type. It is possible to replace damaged or defective components on the printed circuit cards, but great care should be taken in soldering so as not to damage or bridge-over the printed circuit busses, or overheat the semi-conductor components. The repaired area should be recovered with a suitable high-dielectric plastic coating to prevent possible breakdowns across the printed busses due to moisture and dust. The wiring diagrams for the cards in the SLA51F relay are included in the card book GEK-34158.

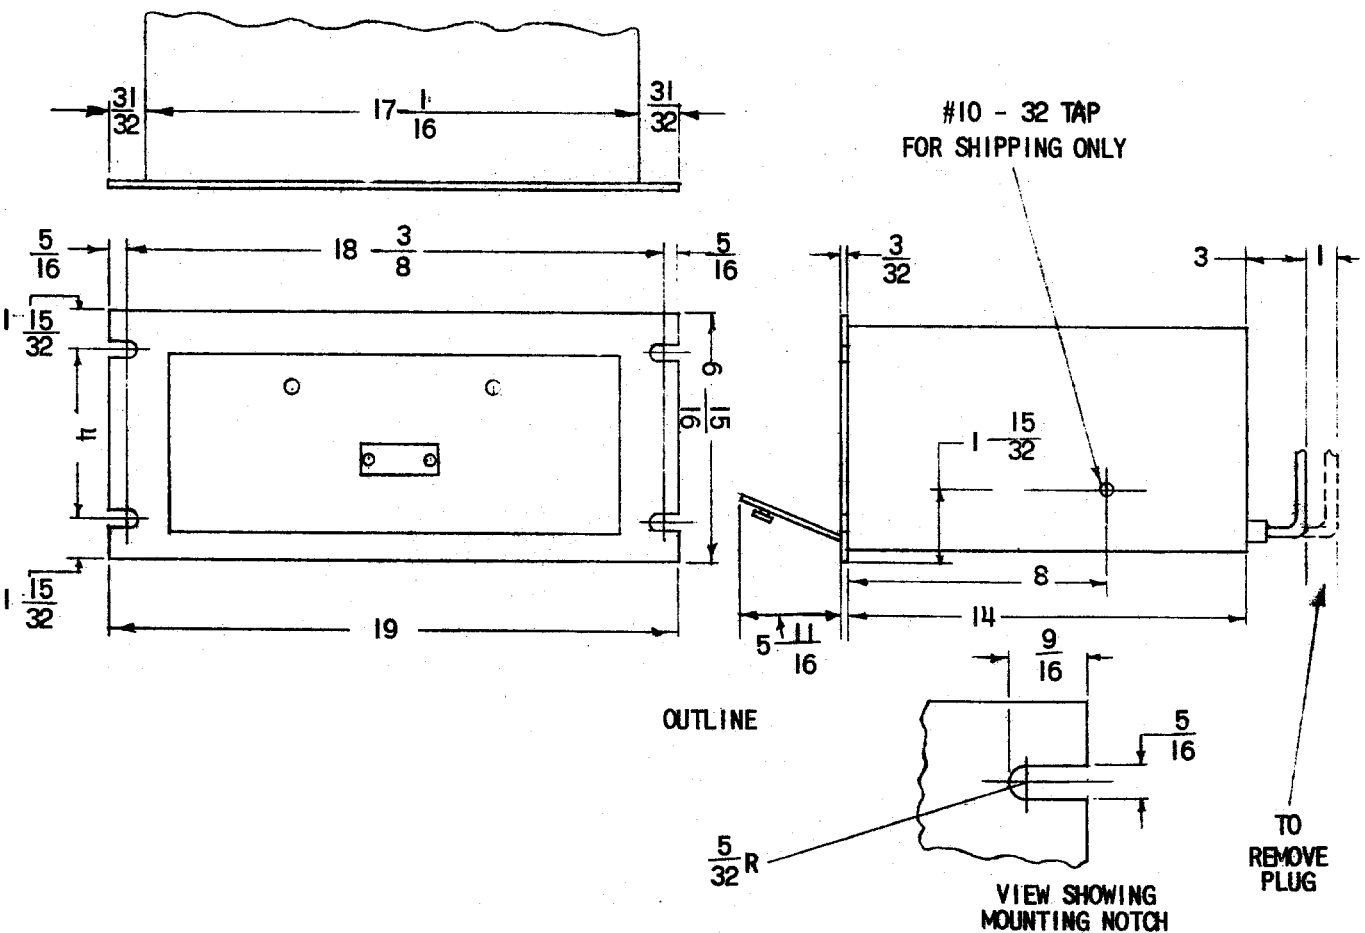


FIG. 1 (0227A2037-0) OUTLINE AND MOUNTING DIMENSIONS FOR THE TYPE SLA51F RELAY

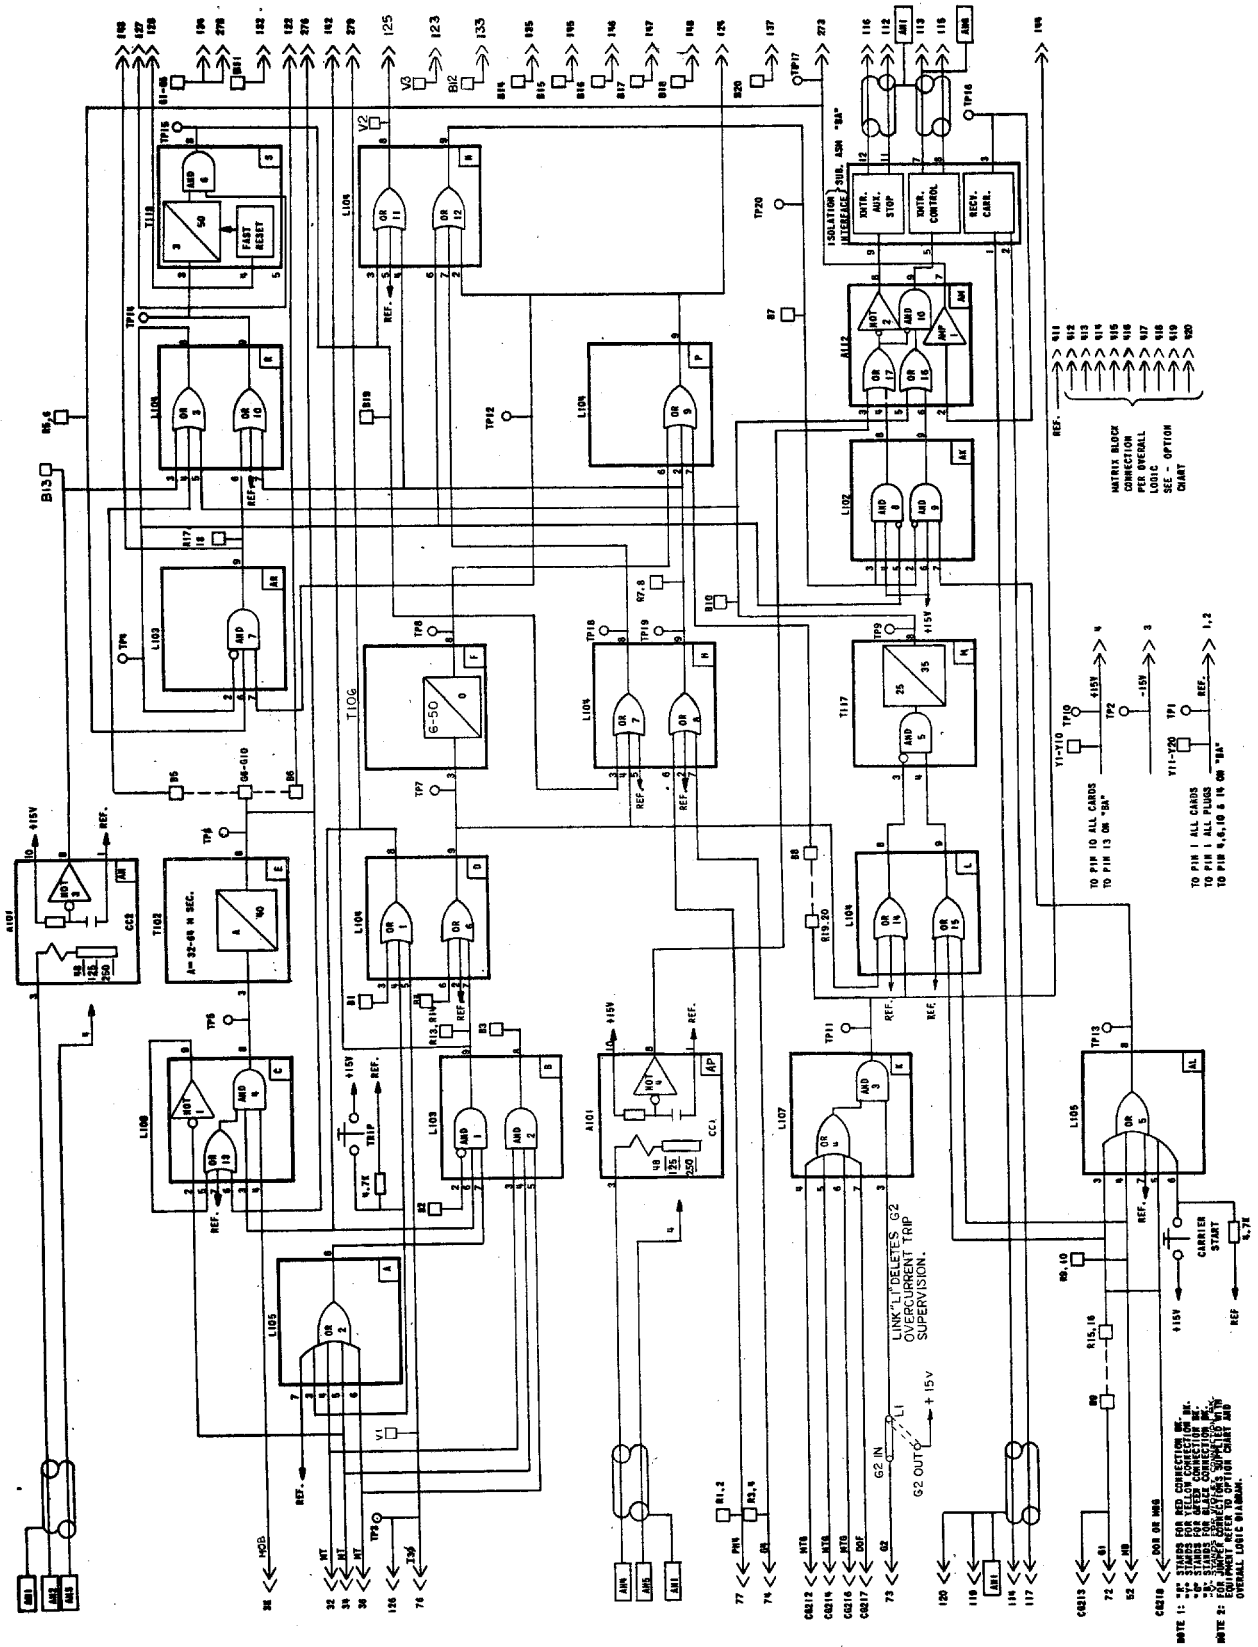


FIG. 2 (0167C8775-0) INTERNAL CONNECTIONS FOR THE TYPE SLA51F RELAY

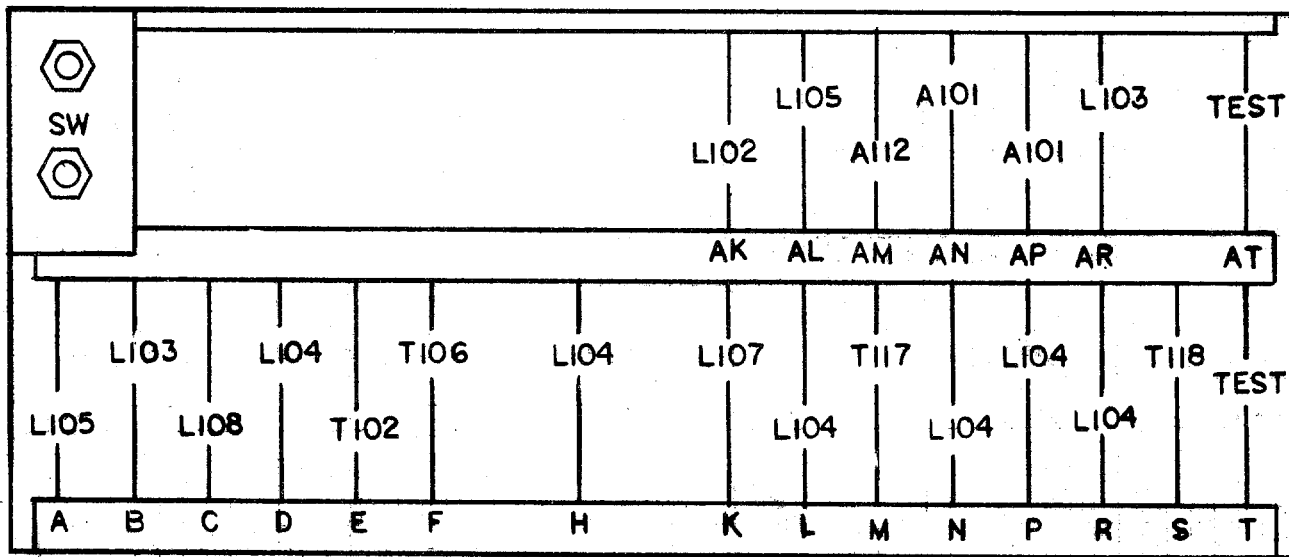
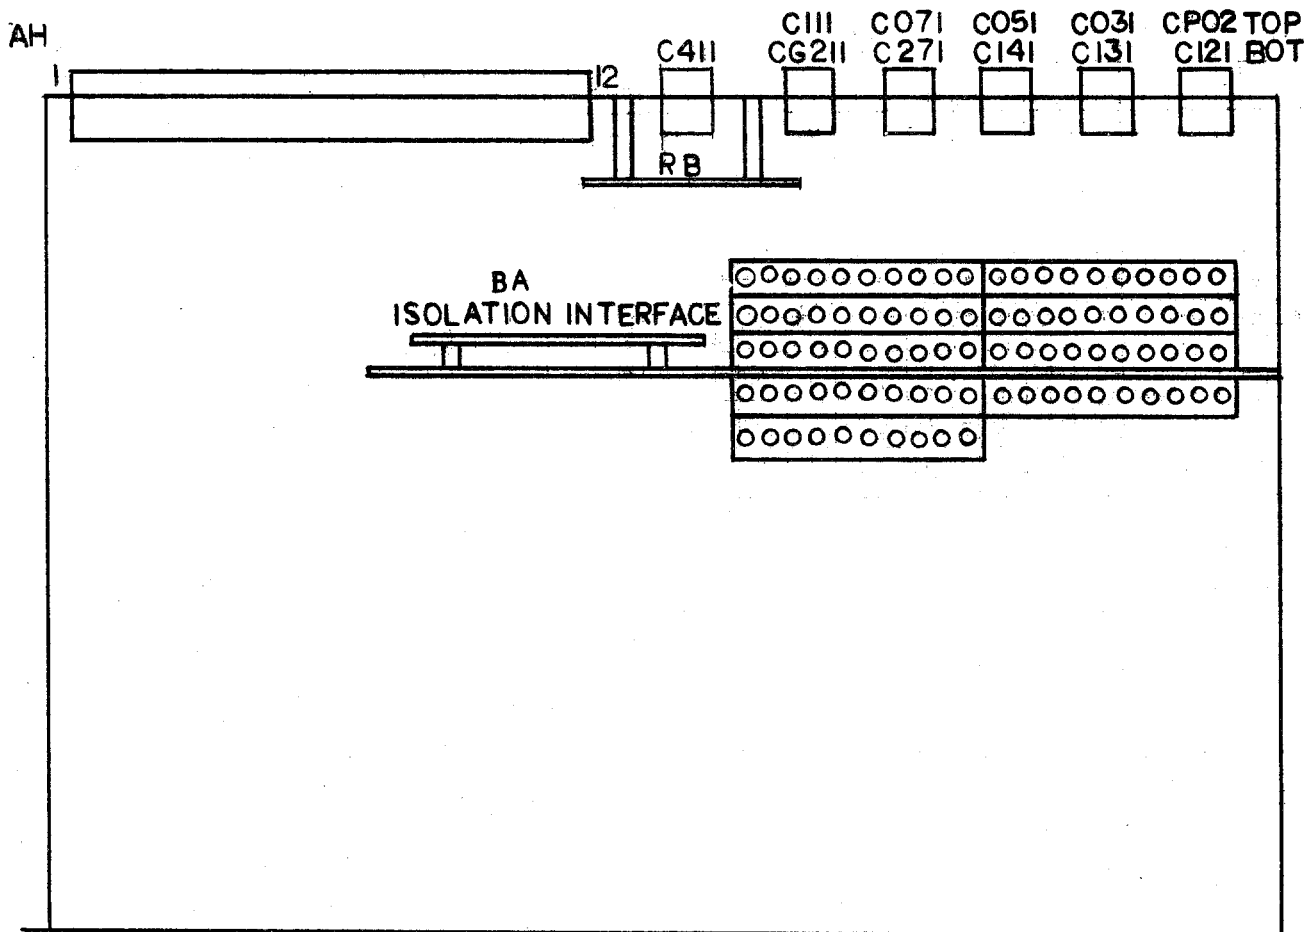


FIG. 3 (0257A6285-0) COMPONENT LOCATIONS FOR THE TYPE SLA51F RELAY

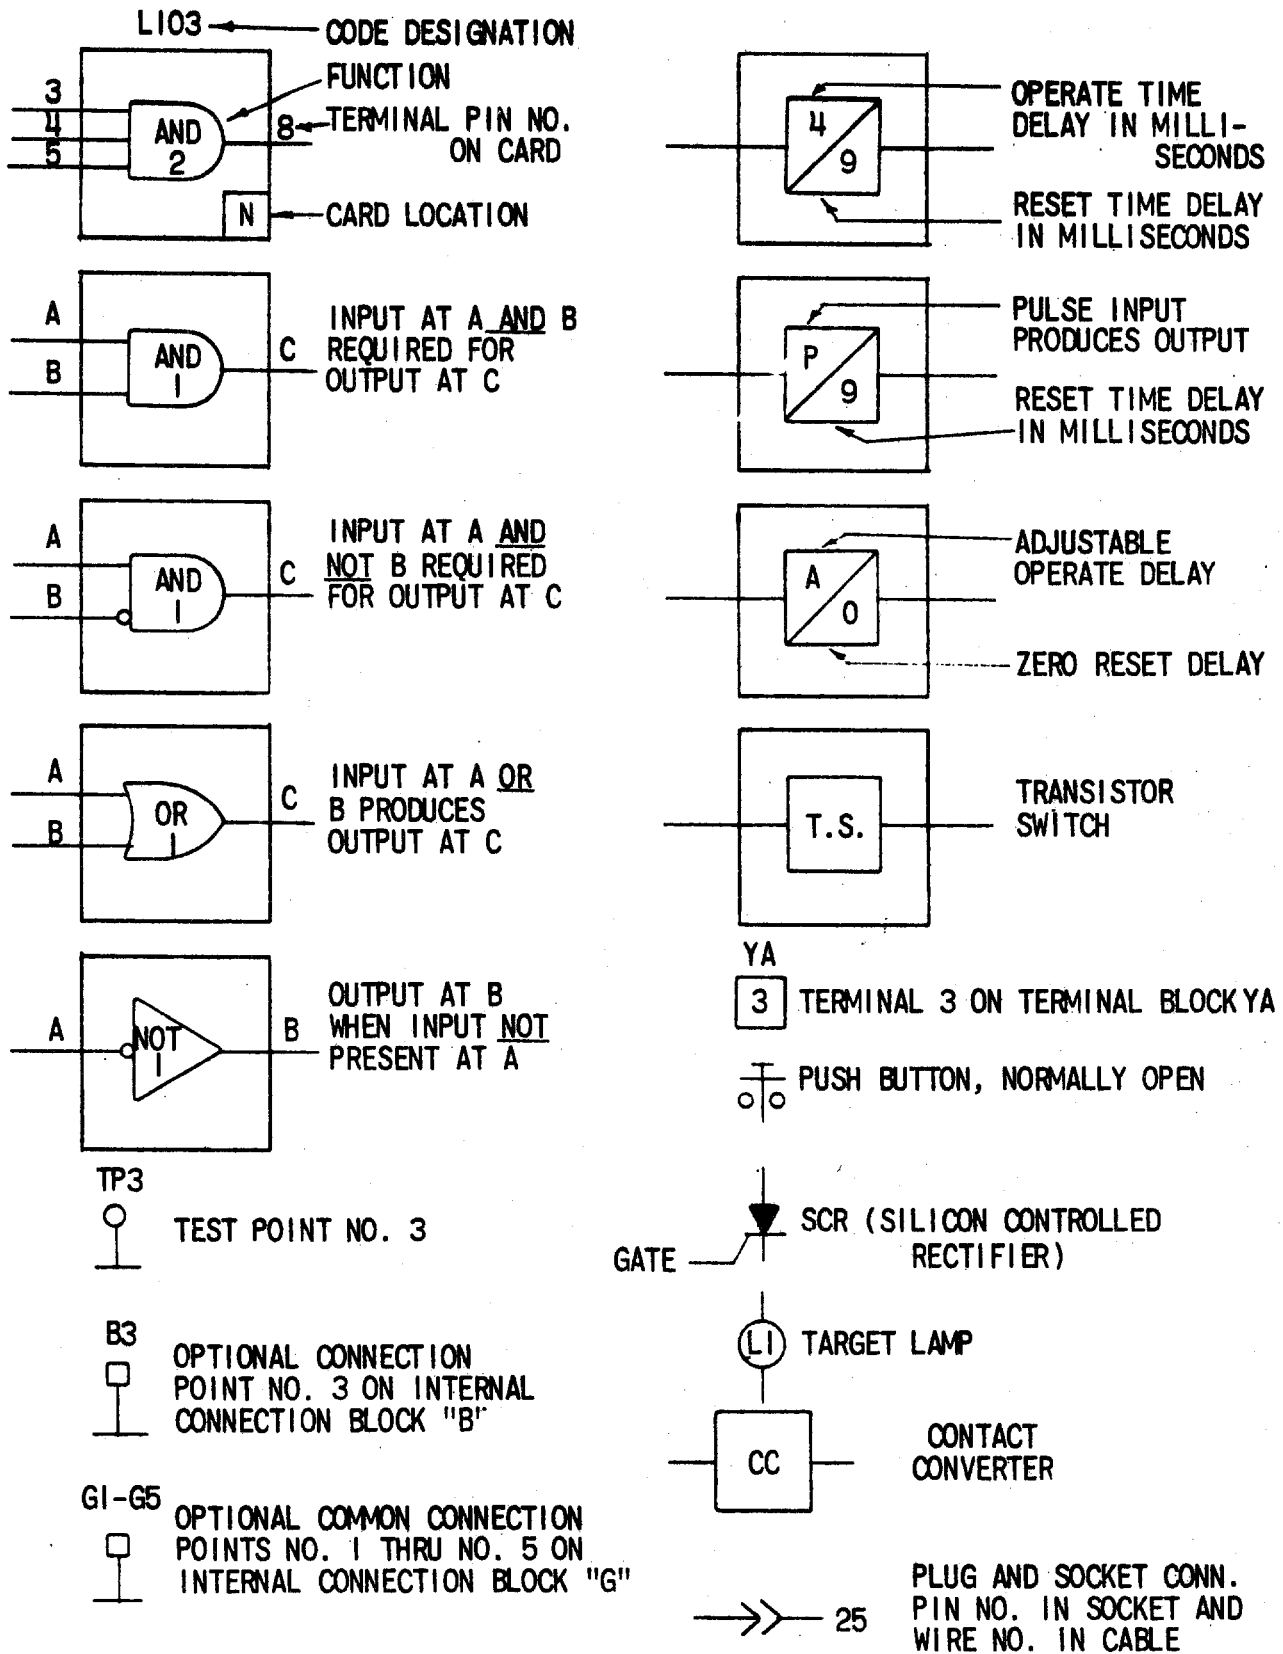


FIG. 4 (0227A2047-0) LOGIC AND INTERNAL CONNECTIONS DIAGRAM LEGEND

THE FOLLOWING JUMPER CONNECTIONS ARE MADE AT THE MATRIX BLOCKS INSIDE OF THE RELAY REFERENCED IN ABOVE TITLE BLOCK (59)

PL = CABLE PLUG (S) = LOGIC FUNCTION-CARD PIN NUMBER

MATRIX BLOCK JUMPERS		LOGIC FUNCTION		MATRIX BLOCK JUMPERS		LOGIC FUNCTION	
FROM	TO	FROM	TO	FROM	TO	FROM	TO
B2	Y11	AND1(2)	REF				
B1	Y12	OR1(3)	REF.				
R1	PL412	PL 77	PL 412				
R3	PL413	PL 74	PL 413				
G6	PL419	A/40(8)	PL419				
B4	Y13	ORG(6)	REF.				
R13	PL418	AND1(9)	PL 418				
R19	PL417	AND3(8)	PL417				
R20	B8	AND3(8)	OR 9(7)				
R7	B15	OR 8(9)	PL145				
B5	Y14	OR 3(4)	REF.				
R5	PL415	AND7(6)	PL 415				
B7	PL414	OR12(9)	PL414				
PL416	G1	PL416	PL134				

FIG. 5 (0227A2050 SH.No. 59) SAMPLE OPTION CHART FOR THE TYPE SLA51F RELAY



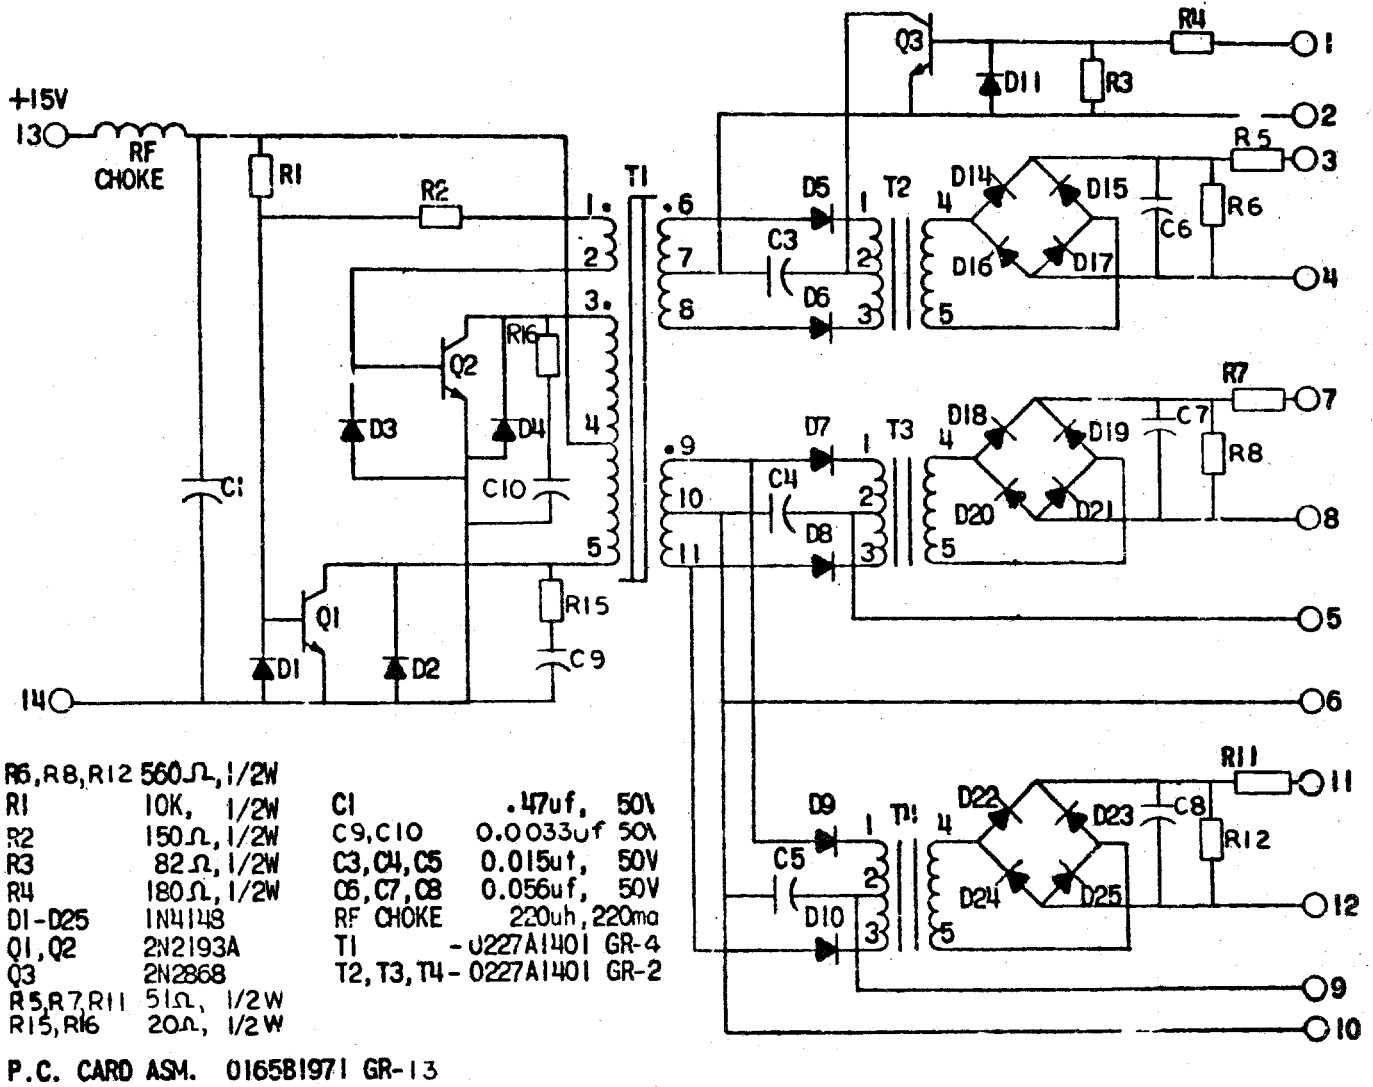


FIG. 6 (0208A5504AJ-1) ISOLATION INTERFACE CIRCUIT

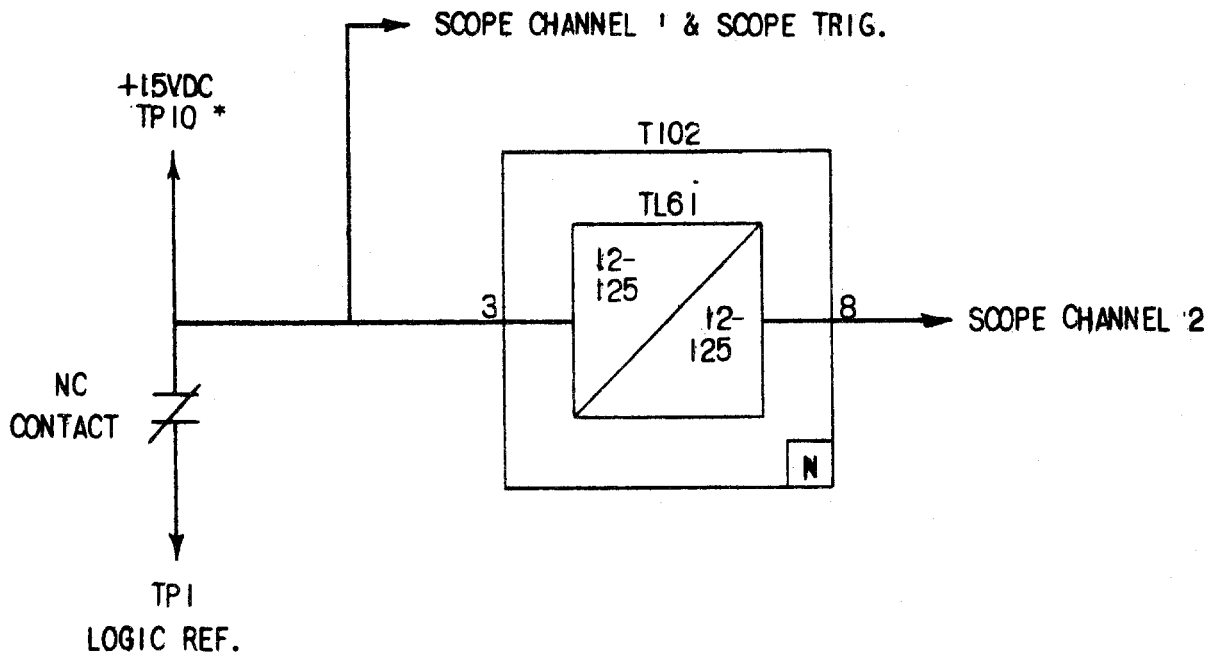


* THE 15VDC SIGNAL AT PIN 10 HAS A CURRENT LIMITING RESISTOR MOUNTED ON THE TEST CARD.


FIG. 7 (0246A7987-0) LOGIC TIMER TEST CIRCUIT

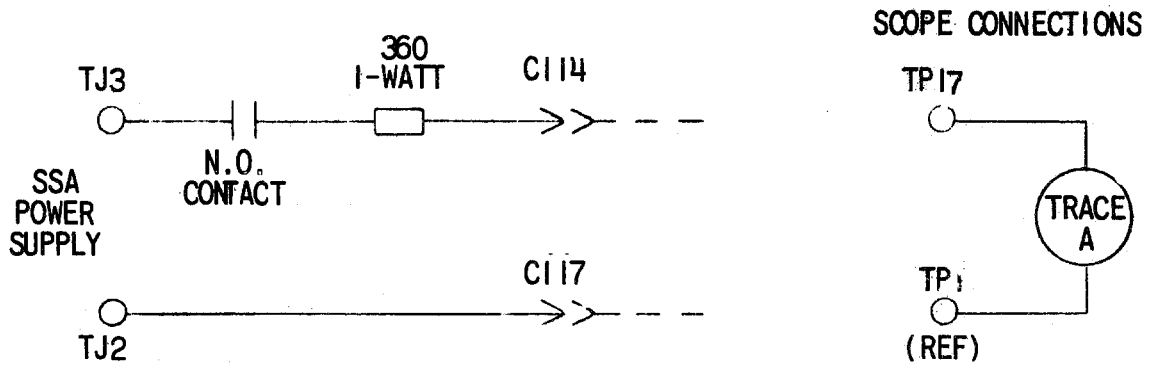

A-RECEIVED CARRIER TEST CONNECTIONS

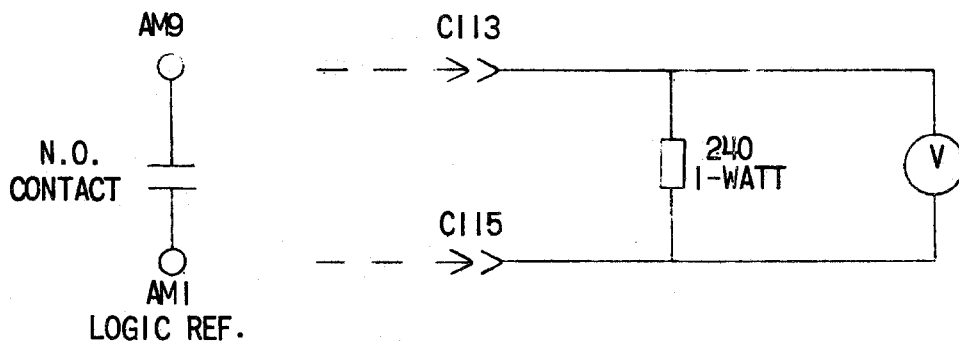

B-TRANSMITTER CONTROL TEST CONNECTIONS

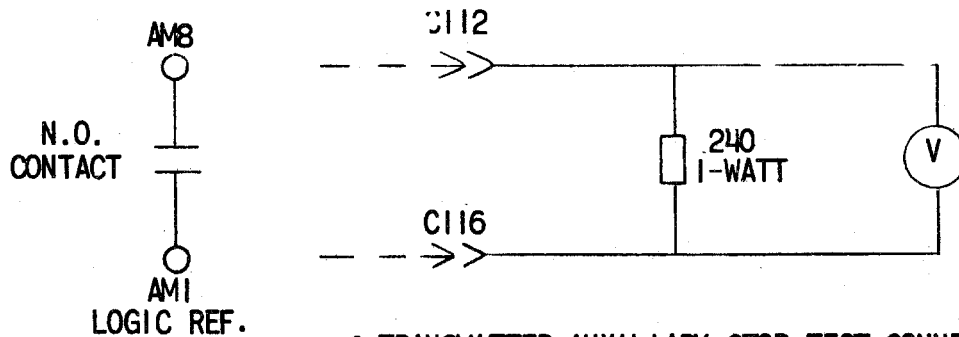

C-TRANSMITTER AUXILIARY STOP TEST CONNECTIONS

FIG. 8 (0257A6244-0) ISOLATION INTERFACE TEST CIRCUIT

GENERAL ELECTRIC INSTALLATION AND SERVICE ENGINEERING OFFICES

FIELD SERVICE OFFICE CODE KEY
 * Mechanical & Nuclear Service
 † Electrical & Electronic Service
 ‡ Marine Service
 × Transportation

FOR YOUR LASTING SATISFACTION ... with the performance and availability of your General Electric equipment, GE provides this nationwide network of field service offices, serving utility, industrial, transportation and marine users. Qualified field engineers provide installation, start-up, employee training, engineering maintenance and other services, throughout the productive life of the equipment. For full information, call your nearest Installation & Service Engineering office.

ALABAMA
 * † Birmingham 35205 2151 Highland Ave.
 * † Mobile 36609 1111 S. Beltline Highway

ALASKA
 † Anchorage 99501 115 Whitney Rd.

ARIZONA
 * † Phoenix 85012 3550 N. Central Ave.
 † Tucson 85718 151 S. Tucson Blvd.

ARKANSAS
 † North Little Rock 72119 120 Main St.

CALIFORNIA
 * † † Los Angeles 90054 212 N. Vignes St.
 † † Palo Alto 94303 960 San Antonio Rd.
 † † Sacramento 95808 2407 J St.
 † † San Diego 92103 2560 First Ave.
 * † † San Francisco 94119 55 Hawthorne St.
 * † † Vernon 90058 3035 E. 46th St.

COLORADO
 * † Denver 80206 201 University Blvd.

CONNECTICUT
 * † Meriden 06450 1 Prestige Dr.

FLORIDA
 † † Jacksonville 32203 4040 Woodcock Dr.
 † † Miami 33134 4100 W. Flagler St.
 * † † Tampa 33609 2106 S. Lois Ave.

GEORGIA
 * † † Atlanta 30309 1860 Peachtree Rd., NW
 † † Savannah 31405 5002 Paulsen St.

HAWAII
 * † † Honolulu 96813 440 Coral St.

ILLINOIS
 * † † † Chicago 60680 840 S. Canal St.

INDIANA
 † † Evansville 47705 2709 Washington Ave.
 † † Fort Wayne 46807 3606 S. Calhoun St.
 * † † Indianapolis 46207 3750 N. Meridian St.

IOWA
 † † Davenport 52805 P. O. Box 630, 1039 State St., Bettendorf

KENTUCKY
 † † Louisville 40218 2300 Meadow Dr.

LOUISIANA
 * † † Baton Rouge 70806 8312 Florida Blvd.
 * † † New Orleans 70125 4747 Earhart Blvd.
 * † † Shreveport 71104 2620 Centenary Blvd.
 † † Monroe 71201 1028 North 6th St.

MARYLAND
 * † † Baltimore 21201 1 N. Charles St.

MASSACHUSETTS
 * † † Wellesley 02181 1 Washington St.

MICHIGAN
 * † † Detroit 48202 700 Antoinette St.
 † † Jackson 49201 210 W. Franklin St.
 † † Saginaw 48607 1008 Second National Bank Bldg.

MINNESOTA
 * † † Duluth 55802 300 W. Superior St.
 * † † Minneapolis 55416 1500 Lilac Drive So.

MISSOURI
 * † † Kansas City 64199 911 Main St.
 * † † St. Louis 63101 1015 Locust St.

MONTANA
 † † Butte 59701 103 N. Wyoming St.

NEBRASKA
 * † † Omaha 68102 409 S. 17th St.

NEW JERSEY
 * † † Millburn 07041 25 E. Willow St.

NEW YORK
 * † † Albany 12205 15 Computer Drive, West
 * † † Buffalo 14205 625 Delaware Ave.
 * † † † New York 10022 641 Lexington Ave.
 * † † Rochester 14604 89 East Ave.
 * † † Syracuse 13206 3532 James St.

NORTH CAROLINA
 * † † Charlotte 28207 141 Providence Rd.
 * † † Wilmington P. O. Box 186
 Reigelwood 28456 P. O. Box 186

OHIO
 * † † Cincinnati 45206 2621 Victory Pkwy.
 * † † Cleveland 44104 1000 Lakeside Ave.
 † † Columbus 43229 1110 Morse Rd.
 † † Toledo 43606 3125 Douglas Rd.
 † † Youngstown 44507 272 Indianola Ave.

OKLAHOMA
 * † † Oklahoma City 73106 2000 Classen Blvd.
 † † Tulsa 74105 P. O. Box 7646, Southside Sta.

OREGON
 † † Eugene 97401 1170 Pearl St.
 * † † Portland 97210 2929 NW 29th Ave.

PENNSYLVANIA
 * † † Allentown 18102 1444 Hamilton St.
 * † † Philadelphia 19102 3 Penn Center Plaza
 * † † Pittsburgh 15222 300 6th Avenue Bldg.

SOUTH CAROLINA
 † † Columbia 29204 2700 Middleburg Dr.
 † † Greenville 29607 41 No. Pleasantburg Dr.

TENNESSEE
 * † † Chattanooga 37411 5800 Bldg, Eastgate Center
 † † Memphis 38130 3385 Airways Blvd.

TEXAS
 * † † Amarillo 79101 303 Polk St.
 * † † Beaumont 77704 1385 Calder Ave.
 * † † Corpus Christi 78401 205 N. Chaparral St.
 * † † Dallas 75222 8101 Stemmons Freeway
 * † † El Paso 79945 215 N. Stanton
 * † † Fort Worth 76102 408 W. Seventh St.
 * † † Houston 77027 4219 Richmond Ave.
 † † San Antonio 78204 434 S. Main St.

UTAH
 † † Salt Lake City 84111 431 S. Third East St.

VIRGINIA
 * † † Newport News 23601 311 Main St.
 † † Richmond 23230 1508 Willow Lawn Dr.
 † † Roanoke 24015 2018 Colonial Ave.

WASHINGTON
 * † † Seattle 98188 112 Andover Park East, Tukwila
 † † Spokane 99202 E. 1805 Trent Ave.

WEST VIRGINIA
 * † † Charleston 25328 306 MacCorkle Ave., SE

WISCONSIN
 * † † Appleton 54911 3003 West College Dr.
 † † Milwaukee 53202 615 E. Michigan St.

GENERAL ELECTRIC SERVICE SHOPS

WHEN YOU NEED SERVICE ... These GE Service Shops will repair, recondition, and rebuild your electric apparatus. The facilities are available day and night, seven days a week, for work in the shops or on your premises.

Latest factory methods and genuine GE renewal parts are used to maintain performance of your equipment. For full information about these services, contact your nearest service shop or sales office.

ALABAMA
 * † Birmingham 35211 1500 Mims Ave., S. W.
 * † Mobile 36609 721 Lakeside Dr.

ARIZONA
 * † (Phoenix) Glendale 85019 4911 W. Colter St.
 * † Phoenix 85019 3840 W. Clarendon St.
 * † Tucson 85713 2942 So. Palo Verde Ave.

CALIFORNIA
 * † † Los Angeles 90301 6900 Stanford Ave.
 * † † (Los Angeles) Anaheim 92805 3601 E. LaPalma Ave.
 * † † (Los Angeles) Inglewood 90301 228 W. Florence Ave.
 * † † Sacramento 95814 99 North 17th St.
 * † † (San Francisco) Oakland 94608 1850 34th St.

COLORADO
 * † † Denver 80205 3353 Larimer St.

CONNECTICUT
 * † † (Southington) Plantsville 06479 370 Atwater St.

FLORIDA
 * † † Jacksonville 32203 2020 W. Beaver St.
 * † † (Miami) Hialeah 33010 1062 East 28th St.
 * † † Tampa 33601 19th & Grant Sts.

GEORGIA
 * † † (Atlanta) Chamblee 30341 5035 Peachtree Industrial Blvd.
 * † † Atlanta 2379 John Glenn Dr.

ILLINOIS
 * † † Chicago 60638 6045 S. Nottingham Ave.

INDIANA
 * † † Evansville 47711 401 N. Congress Ave.
 * † † Ft. Wayne 46803 1731 Edsall Ave.
 * † † Hammond 46320 1138 164th Place
 * † † Indianapolis 46222 1740 W. Vermont St.

IOWA
 * † † (Davenport) Bettendorf 52722 1025 State St.

KENTUCKY
 * † † Louisville 40209 3900 Crittenden Drive

LOUISIANA
 * † † Baton Rouge 70814 10955 North Dual St.
 * † † New Orleans 70114 1115 DeArmas St.

MARYLAND
 * † † Baltimore 21230 920 E. Fort Ave.

MASSACHUSETTS
 * † † (Boston) Medford 02155 3960 Mystic Valley Pkwy.

MICHIGAN
 * † † (Detroit) Riverview 18075 Krause Ave.
 * † † Flint 48505 1506 E. Carpenter Rd.

MINNESOTA
 * † † Duluth 55807 50th Ave. W. & St. Louis Bay
 * † † Minneapolis 55430 2025 49th Ave., N.

MISSOURI
 * † † Kansas City 64120 3525 Gardner Ave.
 * † † St. Louis 63110 1115 East Rd.

NEW JERSEY
 * † † New Brunswick 08902 3 Lawrence St.

NEW MEXICO
 * † † Albuquerque 87109 4420 McLeod Rd. NE

NEW YORK
 * † † Albany 12205 1097 Central Ave.
 * † † (Buffalo) Tonawanda 14150 175 Milens Rd.
 * † † (Long Island) Old Bethpage 11804 183 Bethpage-Sweet Hollow Rd.
 * † † (New York City) North Bergen, N. J. 07012 6001 Tonnelle Ave.
 * † † (New York City) Clifton, N. J. 07012 9 Brighton Rd.
 * † † Schenectady 12305 1 River Rd.
 * † † Syracuse 13208 1015 E. Hiawatha Blvd.

NORTH CAROLINA
 * † † Charlotte 28208 2328 Thrift Rd.

OHIO
 * † † Akron (Canton) 44720 7900 Whipple Ave. N. W.
 * † † Cincinnati 45202 444 West 3rd St.
 * † † Cleveland 44125 4477 East 49th St.
 * † † Columbus 43229 6660 Huntley Rd.
 * † † Toledo 43605 405 Dearborn Ave.
 * † † Youngstown 44507 272 E. Indianola Ave.

OKLAHOMA
 * † † Tulsa 74145 5220 S. 100th East Ave.

OREGON
 * † † Eugene 97402 570 Wilson St.
 * † † Portland 97210 2727 NW 29th Ave.

PENNSYLVANIA
 * † † Allentown 18103 668 E. Highland St.
 * † † (Delaware Valley) Cherry Hill, N. J. 08034
 * † † Johnstown 15802 1790 E. Marlton Pike
 * † † Philadelphia 19124 1040 East Erie Ave.
 * † † (Pittsburgh) West Mifflin 15122 4930 Buttermilk Hollow Rd.
 * † † York 17403 54 N. Harrison St.

SOUTH CAROLINA
 * † † (Charleston) No. Charleston 29401 2490 Debonair St.

TENNESSEE
 * † † Knoxville 37914 2621 Governor John Sevier Hwy.
 * † † Memphis 38107 708 North Main St.

TEXAS
 * † † Beaumont 77705 1490 W. Cardinal Dr.
 * † † Corpus Christi 78401 115 Waco St.
 * † † Dallas 75235 3202 Manor Way
 * † † Houston 77036 5534 Harvey Wilson Dr.
 * † † Houston 77036 6916 Harwin Dr.
 * † † Midland 79701 704 S. Johnston St.

UTAH
 * † † Salt Lake City 84110 301 S. 7th West St.

VIRGINIA
 * † † Richmond 23224 1403 Ingram Ave.
 * † † Roanoke 24013 1004 River Ave., SE

WASHINGTON
 * † † Seattle 98134 3422 First Ave., South
 * † † Spokane 99211 E. 4323 Mission St.

WEST VIRGINIA
 * † † Charleston 25328 306 MacCorkle Ave., SE

WISCONSIN
 * † † (Appleton) Menasha 54910 1725 Racine St.
 * † † Milwaukee 53207 235 W. Oklahoma Ave.

* Electrical/Mechanical Service Shop * Instrumentation Shop Δ Special Manufacturing Shop