



INSTRUCTIONS

GEK-14872

STATIC VOLTAGE REGULATOR

FOR

AC GENERATORS

3S7930SA111E4

Information contained herein is proprietary information of the General Electric Company. The dissemination, use, or duplication of this information for any purpose other than that for which the information is provided is prohibited by the General Electric Company except by express permission.

GENERAL  ELECTRIC

CONTENTS

	<u>Page</u>
Introduction	3
Receiving, Handling and Storage	3
Description	3
Installation	3
Operation	3
Adjustments	4
Principles of Operation	4
General	4
Silicon Controlled Rectifier	4
Series Rectifier - 1 REC	6
Firing Circuit	6
Stabilizing Circuit	6
Current Transformer Forcing Unit	6
Manual Control	8
Droop Circuit for Paralleling Generators	8
Power Transformers	8
Maintenance	8
Trouble Shooting	8
Renewal Parts	10

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

STATIC VOLTAGE REGULATOR FOR AC GENERATORS

INTRODUCTION

The 3S7930SA111E4 voltage regulator controls the voltage of a 50 or 60 cycle AC generator by controlling the field current to the generator exciter. A silicon controlled rectifier controls power delivered to the exciter field. The regulator includes a current transformer forcing unit to provide excitation; thus, sustains short circuit current for selective relay tripping, where the voltage regulator input fails due to a fault on the system. The regulator is completely static, having no moving parts to perform the regulating function. A relay is used to assure initial voltage buildup.

RECEIVING, HANDLING AND STORAGE

Receiving and Handling

Immediately upon receipt, the equipment should be carefully unpacked to avoid damage. Particular care should be exercised to prevent small parts from being mislaid or thrown away in the packing material.

As soon as the equipment is unpacked, it should be examined for any damage that may have been sustained in transit. If injury or rough handling is evident, a damage claim should be filed immediately with the transportation company and the nearest General Electric Sales Office should be notified promptly.

Storage

If the equipment is not to be used after unpacking, it should be stored in a clean, dry, place and protected from accidental damage. Particular care should be exercised to avoid storing the equipment in locations where construction work is in progress.

DESCRIPTION

The 3S7930SA111E4 voltage regulator consists of a basic regulator, a current transformer forcing unit, a droop kit and miscellaneous components.

The basic voltage regulator consists of a 44B213985 encapsulated block assembly (including terminal board and adjustments) with rectifiers and heat sinks mounted on the block and on the supporting steel base. The reference element (a Zener diode) is contained in the bottom of the block.

The voltage adjusting rheostat is furnished unmounted for mounting by user.

The regulator includes a current transformer forcing unit. This unit is to provide excitation and sustained

short circuit current for selective relay tripping during generator faults.

The regulator includes a CR2790E100A72 relay to assure automatic voltage buildup during starting.

The regulator includes a droop kit for dividing reactive current when paralleling generators.

The regulator includes rectifiers and circuitry for providing manual control of the generator. A manual-automatic selector switch and manual field rheostat are furnished with regulator.

The regulator also includes necessary transformers to provide operation from a 400 to 480 volt generator.

INSTALLATION

The regulator should be mounted so that it is accessible. It should be mounted in an enclosure to protect personnel from exposed voltages. The enclosure should allow a reasonable circulation of air to keep the ambient temperature at 50°C or lower. The regulator must be mounted in an upright position as indicated on the outline drawing. The voltage adjusting potentiometer, manual control rheostat, current transformer for C. T. forcing, and the manual-automatic selector switch are to be remotely mounted by user. The current transformer for the droop kit (furnished by others) is also remotely mounted.

Make all connections to 1TB on regulator per diagram furnished with equipment. Connect all remotely mounted components per diagram furnished with equipment.

OPERATION

CAUTION

THE HEAT SINKS ON THIS REGULATOR ARE AT ABOVE GROUND POTENTIAL

TO PREVENT DAMAGE TO THE EXCITER OR GENERATOR, THE PRIME MOVER SHOULD NOT BE OPERATED AT LESS THAN 75% SPEED FOR MORE THAN 30 SECONDS WITH THE REGULATOR ON.

TO PREVENT DAMAGE TO REGULATOR, EXCITER FIELD RESISTANCE SHOULD NOT BE LESS THAN 1.78 OHMS.

ALWAYS OPEN CURRENT FLOW THROUGH 7CT PRIMARY BEFORE CHANGING TAPS.

Adjustments

Before starting prime mover, set "Voltage Adjust" (1P) and "Stabilizing" (3P) at their mid-points. Set "Gain" (2P) fully counterclockwise.

Start prime mover and bring up to rated speed. Set "Voltage Adjust" to obtain proper line voltage.

Turn "Gain" clockwise to improve regulation as generator is loaded. "Gain" should be set to allow approximately 1% voltage drop going from a no-load to a full-load condition on the generator. It will be necessary to correct voltage level with the "Voltage Adjust" each time the "Gain" is changed.

To obtain optimum transient response when applying and rejecting load, vary the "Stabilizing" (3P) and the connections on 2TB. The "Stabilizing" adjust (3P) acts as a fine adjustment; while the connections on 2TB act as a course or range adjustment.

This regulator includes a choke (2X) and capacitor (4C) for increasing range of stabilizing circuit. If less stabilizing range is necessary or gain is too high on these regulators, move jumper (16) on 3TB from (B to C) to (A to B).

Figure 1 shows the effect of "Stabilizing" adjustment as seen on an oscilloscope or recorder when applying and rejecting loads.

It should not be necessary to test the current transformer forcing unit. The setting of the current transformer on the current transformer forcing unit should have already been arrived at analytically as described in "Principles of Operation".

"Voltage Adjust" should be checked weekly, or monthly as required.

PRINCIPLES OF OPERATION

General

The 3S7930SA111E4 voltage regulator operates by taking power from the generator output; and rectifying and controlling the power to furnish d-c excitation to the exciter field. Refer to Figure 7, the Elementary Diagram for this regulator.


Silicon Controlled Rectifier

The d-c excitation power for the exciter field is furnished by single phase half-wave silicon controlled rectifier (SCR). The SCR (1CD) is phase controlled to control the power delivered to the exciter field.


An SCR is similar to a Thyatron tube in that it remains non-conductive until a firing pulse is applied through its gate-to-cathode junction. If the anode is positive with respect to the cathode when a pulse is applied, the SCR will conduct and remain conducting until the anode goes negative and the current goes to zero.

The voltage regulator controls the exciter field voltage by controlling the firing of 1CD on each positive half cycle. See Figure 2.

If 1CD fires early in each positive half cycle (Figure 2B) the regulator delivers a larger average voltage to the exciter field. If 1CD fires late in each positive half cycle (Figure 2A) the regulator delivers the smaller average voltage to the exciter field. Although the voltage applied to the exciter field is portions of a sine wave, the current through the field is continuous because of the inductance of the field winding. Since 1CD cannot supply voltage from the AC supply during the negative half cycle the field current conducts through the "free-wheeling" rectifier 2REC.

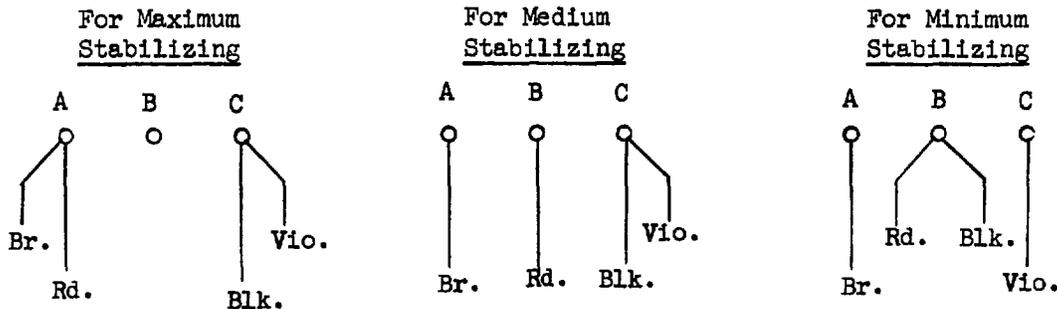


STABILIZING RANGE CONNECTIONS ON 2TB

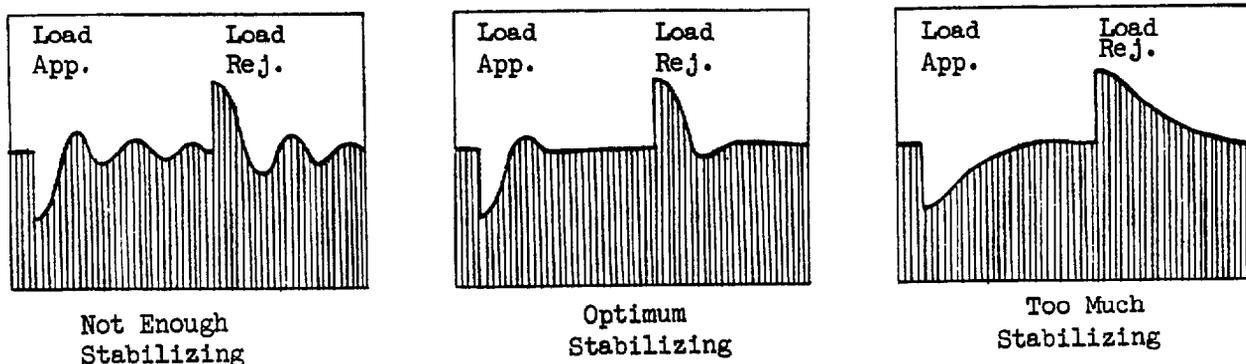

TYPICAL OSCILLOGRAMS LOOKING AT AN AMPLIFIED PORTION OF GENERATOR A-C VOLTAGE

Figure 1

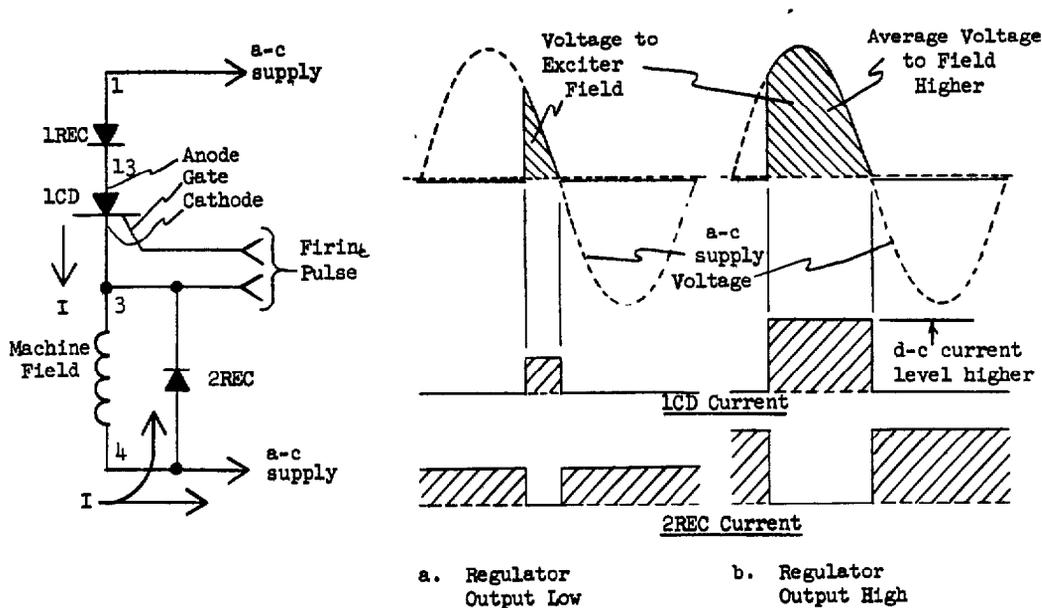

PHASE CONTROLLED OUTPUT OF SCR (1CD)

Figure 2

Series Rectifier - 1REC


Rectifier 1REC is a series diode that takes most of the inverse voltage during the negative half cycle; thus, protects the SCR from permanent damage due to excess transient inverse voltage. Rectifier 1REC also furnishes the initial DC to the exciter field when the buildup relay contacts are closed during startup.

Firing Circuit

The SCR (1CD) firing pulse comes from a saturable reactor firing circuit in the encapsulated assembly. The encapsulated assembly also contains a sensing circuit, comparison circuit, feedback circuit, stabilizing circuit, and a zener diode reference in the bottom compartment. The sensing circuit is designed to regulate average line voltage; thus, on applications where generator wave shape may be distorted, the regulator will more nearly regulate average voltage instead of peak voltage.

Stabilizing Circuit

The stabilizing circuit consists of an RC combination of 3P and capacitors in the encapsulated assembly. See Figure 3.

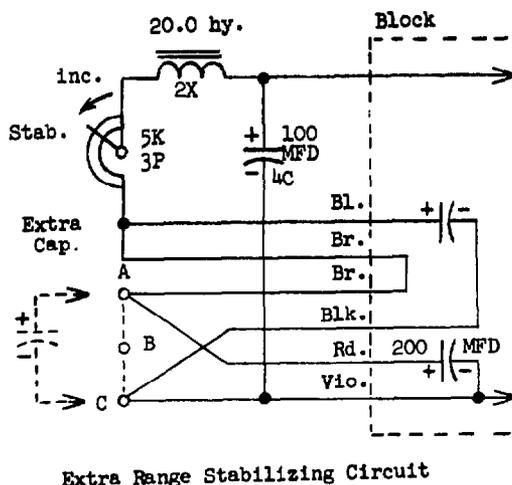

STABILIZING CIRCUIT

Figure 3

Stabilizing capacity can be varied by changing the connections on 2TB. (See Operation). This provides choice of 100, 200, and 400 MFD for stabilizing and should cover all normal machine characteristics. Should additional stabilizing be required, a 500 MFD-50 W. V. D. C. polarized electrolytic capacitor may be added at 2TB (+ to A, - to C).

The addition of 2X and 4C is to provide greater range of stabilizing circuit for obtaining optimum response on larger machines.

Current Transformer Forcing Unit

The current transformer forcing unit switches in when associated voltage regulator power source fails, allowing its C. T. to supply excitation to the exciter field and thus sustain generator short circuit current as required for selective relay tripping.

Since the voltage regulator output and C. T. forcing unit output are in series, either can supply machine excitation. See Figure 4.


When regulator is operating normally the CT forcing unit output rectifier bridge (15, 16, 17 and 18REC) is shorted by 7CD silicon controlled rectifier. The voltage regulator therefore furnishes voltage to the exciter field normally and the CT current circulates through the shorted rectifier bridge.

When the voltage regulator power source fails, or drops below approximately 1/3 normal, 7CD will stop conducting and allow the CT to supply DC current to the exciter field to sustain excitation to the machine.

Since there is no control during the current forcing condition, if the CT output current is too small the system will collapse and not sustain short circuit excitation. If the CT output current is larger than a critical value, the excitation, and short circuit current, will increase until some part of the system saturates.


The forcing C. T. is designed to saturate at an output voltage level as required by the exciter field for maintaining a specified short circuit current out of the generator. Increasing the C. T. secondary turns increases the voltage level at which the C. T. will saturate; therefore, increases the current sustained into a short circuit. Since increasing the C. T. secondary turns decreases the C. T. secondary current, an excess number of secondary turns will decrease the C. T. secondary current below the critical value and the system will collapse. See Figure 5.

The setting of the C. T. secondary turns can be established analytically, as shown in Figure 5. For a particular generator, the value of exciter field current can be established for sustaining a specified line current into a specified fault. (Usually a three phase line-to-line fault, the worst condition, is specified). Knowing exciter field current and field resistance, the required exciter field voltage can be established and the critical excitation line drawn for a specified fault. (See Figure 5).

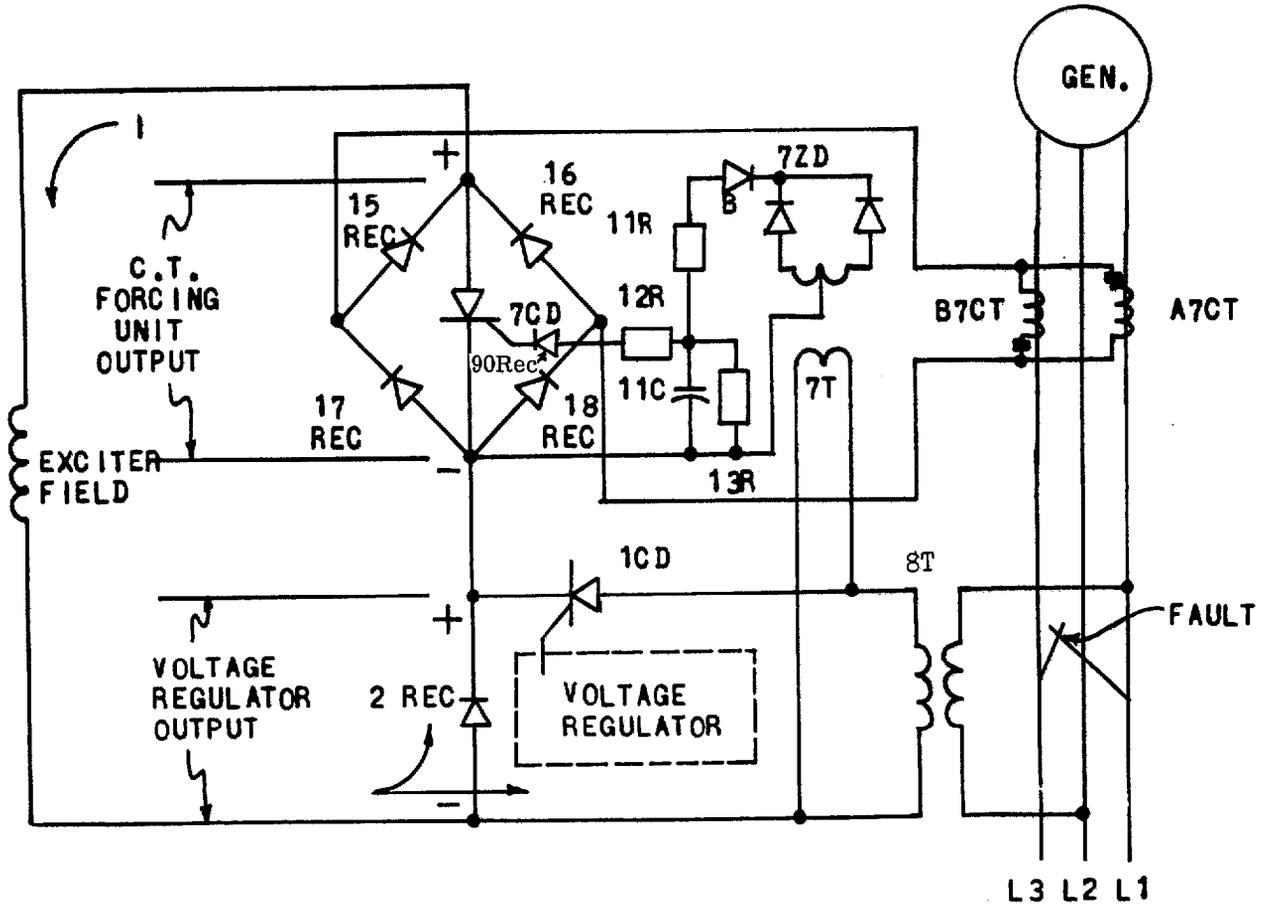

C. T. FORCING UNIT OPERATION

Figure 4

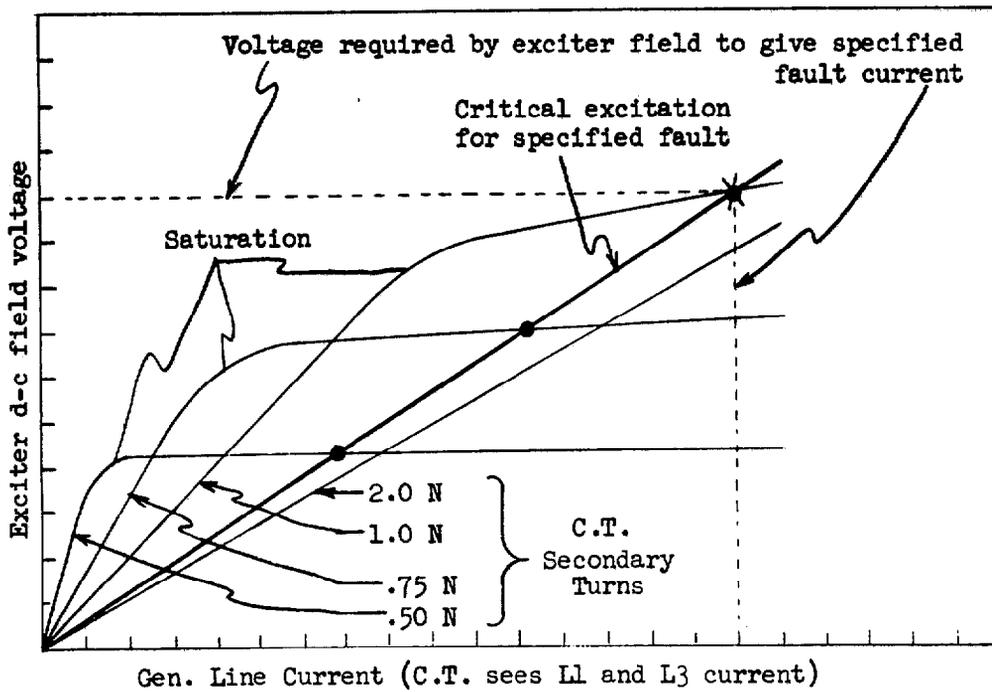

ACTION OF SATURATING C. T. ON FAULTS

Figure 5

The maximum C. T. turns ratio can be established for the respective line current and exciter field requirements. If the C. T. turns ratio were greater, the C. T. would deliver less than the required excitation, and the system would collapse. The C. T. turns ratio used must be less than the critical value, so that the system will tend to overexcite. The C. T. is then designed to saturate at a voltage level that will provide the proper excitation.

Varying the C. T. secondary turns also varies its voltage saturation level, thus the choice of C. T. turns provides an adjustment. A proper turns ratio can be established as shown in Figure 5 by picking the C. T. turns curve that crosses the critical excitation line nearest the required excitation point X.

The C. T. output bridge is shorted to prevent forcing unless voltage source to regulator fails. The silicon controlled rectifier (7CD) is continuously conducting to short the bridge as long as the voltage regulator power source is present. The DC firing voltage for the SCR (7CD) is supplied by a power supply consisting of 7T, 19REC, 20REC, 11C, and 13R. When the voltage regulator power source fails, the DC firing voltage drops to cease firing 7CD. The zener diode 7ZD provides a sharp cutoff of the firing at approximately one-third normal voltage.

The CT fault current is extremely high at the first instant a fault occurs and a Thyrite* resistor (THY) is used as a voltage suppressor and limits the excess voltage supplied by the C. T. This protects 7CD and the rectifier bridges from excess voltage.

Manual Control

Manual control is provided by rectifiers 21REC and 22REC and the manual field rheostat. Rectifier 22REC provides half wave rectification to furnish DC through the manual field rheostat for excitation power for manual control. Rectifier 21REC acts as a free-wheeling rectifier to carry current during the negative half cycle during the manual control operation.

Selector switch 1SS provides for transferring from manual to test to automatic control. In the Auto position, excitation is furnished through the voltage regulator and C. T. forcing panel. During manual operation, excitation is furnished through the manual field rheostat, and the input to the voltage regulator is disconnected. In the test position, excitation is furnished through the manual field rheostat but the voltage regulator is connected so that its output may be checked. The output of the voltage regulator may be checked in the test position by placing a 250 ohm, 10 watt resistor across A to B on 10TB. The voltage output from the regulator can then be monitored with a voltmeter. As generator voltage is decreased (with manual control) regulator output voltage should increase. As generator voltage increases, regulator output voltage should decrease.

*Registered Trademark of General Electric Co.

Droop Circuit for Paralleling Generators

A droop circuit is connected to the voltage regulator between transformer 9T and terminal J at the voltage regulator. The droop circuit consists of a loading rheostat (used with a standard 5 amp CT) and delivers an AC voltage that adds to the voltage going to the regulator sensing circuit. This added voltage may cause the sensing circuit voltage to increase or decrease depending on the phase relationship. See Figure 6.

When the generator is supplying unity power factor current, the voltage across the loading rheostat will add to the line voltage at a 90° angle such that the sensing circuit and line voltages will be practically the same. (Figure 6A). Should reactive current tend to increase in the lagging direction (Figure 6B) the regulator sensing circuit will see a higher than normal voltage, indicating overexcitation; thus, the regulator will decrease excitation to lower line voltage, thereby decreasing the lagging reactive current. Should reactive current tend to increase in the leading direction (Figure 6C) the regulator sensing circuit will see a lower than normal voltage, indicating underexcitation; thus the regulator will increase excitation to raise line voltage, thereby decreasing the leading reactive current. Figure 6 illustrates circuit for phase sequence shown on elementary diagram. If phase sequence is reversed, reverse connections to N and P on 10TB.

Power Transformers

Transformer 8T is provided to reduce the input voltage from the generator from 400-480 volts to 100-150 volts for operating the controlled rectifier.

Transformer 9T is provided to decrease the input voltage from the generator from 400-500 volts to 200-250 volts for input to the voltage regulator sensing circuit.


Resistor 20R is provided for limiting the excitation, thus limiting sustained short circuit currents. Relay 1CR bypasses 1CD to assure voltage buildup when starting, even when generator residual voltage is low.

MAINTENANCE

Since the regulator contains no moving parts, little maintenance should be required. Periodic checks should consist of checking the voltage level and regulation. The regulator should be cleaned with a blower as required to prevent an accumulation of dust and dirt.

TROUBLE SHOOTING

The chart shown on the next page may be helpful for troubleshooting and locating faulty components; however, a thorough study of the "Principles of Operation" will be the greatest aid to troubleshooting.

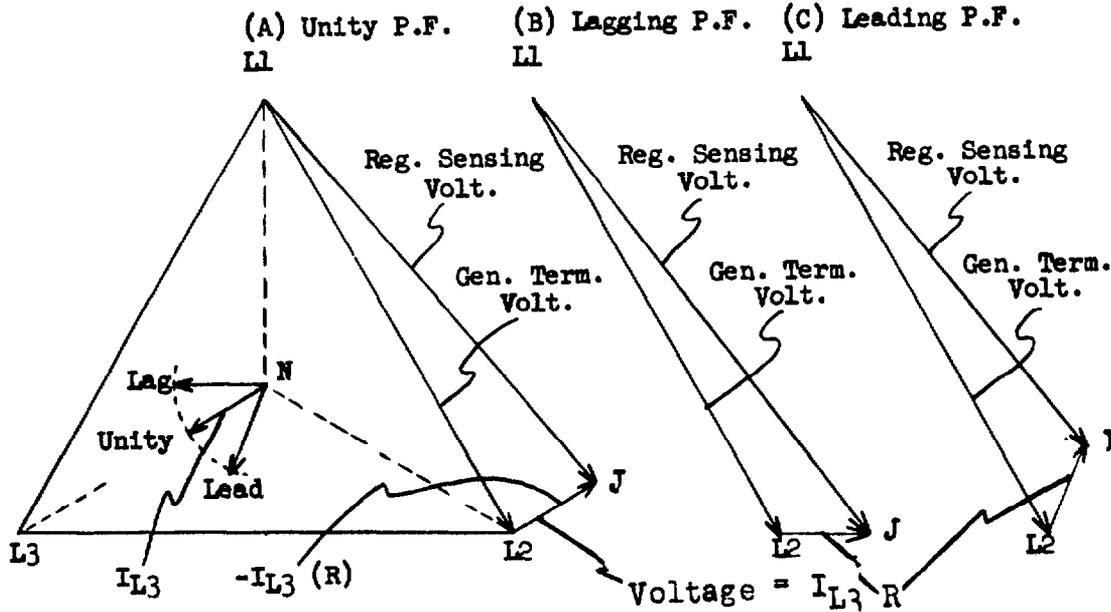

R = Resistance of 6P

OPERATION OF PARALLELING (DROOP) CIRCUIT

Figure 6

TROUBLE SHOOTING CHART

TROUBLE	PROBABLE CAUSE	CHECK
I. Generator Voltage will not build up.	1. No power to generator field.	a. Connections to regulator. b. Connections between exciter and generator. c. 1REC and 2REC. d. 1CR.
	2. No residual voltage out of generator.	a. Reverse exciter field connections. b. Try flashing field with battery (+ to B - to A)
II. Generator voltage goes to ceiling.	1. No feedback voltage signal.	a. "Droop" circuit connection. b. 1P connections c. 1ZD
	2. No control of SCR	a. 1CD b. 1CR
III. Poor voltage regulation	1. Loss in system gain	a. "Gain" adjust per OPERATION b. Exciter output to generator field.
	2. Distorted input to sensing circuit	a. For unbalanced 3 phase loads. b. Generator wave shape

(Continued on page 10)

TROUBLE SHOOTING CHART (CONTINUED)

TROUBLE	PROBABLE CAUSE	CHECK
IV. Instability	1. Excess transient system gain	a. "Gain" adjust per OPERATION b. Exciter field resistance too low? c. "Stabilizing" per OPERATION
V. Slow system response	1. Low transient system gain.	a. "Stabilizing" adjustments per OPERATION b. Loss in system gain. Check Step III.
VI. Paralleled generators will not divide reactive KVA	1. Droop circuit	a. Try reversing connections to loading rheostat b. Increase droop circuit CT loading resistance c. Check generator line phase sequence.
VII. Sustained short circuit too low	1. CT not delivering enough voltage	a. Increase CT secondary turns.
	2. Exciter output low	a. Rotating rectifiers if exciter is brushless. b. Brushes, if exciter is DC type.
VIII. Sustained short circuit current too high	1. C. T. delivering too much voltage	a. Decrease C. T. secondary turns
	2. Other than a 3 phase fault	a. C. T. unit and C. T. design is for the worst faults, a 3 phase fault. For single phase faults short circuit currents will be higher.
IX. System collapses under short circuits	1. 7CD not switching	a. Operation of 7CD when voltage is removed from A to B
	2. C. T. secondary current to low.	a. Decrease C. T. secondary turns

RENEWAL PARTS

Should a component fail, a replacement part can be ordered from the nearest sales office of the General Electric Company. When ordering renewal parts specify the quantity required, give the catalog number

and describe the required parts in detail. In addition, give the 3S model number and the complete nameplate rating of the equipment. A principal renewal parts list is furnished with equipment.

