



INSTRUCTIONS

GEK-49810

AUXILIARY LOGIC UNIT TYPE SLA52H

POWER SYSTEMS MANAGEMENT DEPARTMENT

GENERAL  ELECTRIC

PHILADELPHIA, PA.

CONTENTS

	<u>PAGE</u>
DESCRIPTION	3
APPLICATION AND SETTINGS.	3
RATINGS	3
BURDENS	3
OPERATING PRINCIPLES.	3
CONSTRUCTION.	4
INSTALLATION TESTS.	4
CAUTION	5
GENERAL	5
OPERATIONAL CHECKS.	5
TEST CARD ADAPTER	5
TIMER ADJUSTMENTS AND TESTS	5
OVERALL EQUIPMENT TESTS	5
MAINTENANCE	6
PERIODIC TESTS.	6
TROUBLE SHOOTING.	6
SPARE PARTS	6

AUXILIARY LOGIC UNITTYPE SLA52HDESCRIPTION

The SLA52H unit is an auxiliary logic unit in blocking or unblocking schemes using frequency shift channel equipment. It is usually used with a type SLYP positive sequence distance unit, a type SLCN negative sequence directional overcurrent unit, a type SLAT output tripping unit, a type SSA power supply and a test panel.

The SLA52H has appropriate interconnections for use with a type SLAT54K auxiliary and tripping unit when applied in single pole tripping and reclosing schemes.

The SLA52H is designed with considerable flexibility to accommodate various types of schemes such as blocking, unblocking, permissive transfer tripping, or combined schemes such as an unblocking scheme combined with a direct transfer trip scheme. Provision is made for various auxiliary tripping circuits which may be supplied initially or easily added later in the field. These optional circuits include direct tripping overcurrent and distance functions, line "pickup" circuitry, "weak infeed" trip circuitry, out-of-step tripping or blocking circuitry, and second zone backup timing circuitry.

APPLICATION AND SETTINGS

Because of the flexibility of the type SLA52H, the application and settings will vary with the particular type of scheme in which it is used. Refer to the overall logic diagram description for application and setting information for the particular scheme in which the SLA52H is used.

RATINGS

The Type SLA52H relay is designed for use in an environment where the ambient temperature outside the relay case is between -20°C and +65°C.

The Type SLA52H relay requires a +15VDC power source which can be obtained from a type SSA50/51 power supply.

Each contact converter in this relay has a link for selecting the proper voltage for the coil circuit of the contact converter. The three available voltage taps are for 48, 125, or 250 VDC.

BURDENS

The SLA52H presents a burden of 350 milliamperes to the +15 VDC supply of the Type SSA power supply.

Each contact converter, when energized, will draw approximately 10 milliamperes from the station battery, regardless of the station battery voltage.

OPERATING PRINCIPLES

The functions included in the Type SLA52H relay involve basic logical operations (AND, OR, NOT) where the presence or absence of signals, rather than their magnitude, controls the operation. Signals are measured with respect to a reference bus accessible at TP1. In general, a signal below one VDC represents an OFF or LOGIC ZERO condition; an ON or LOGIC ONE condition is represented by a signal of approximately +15 VDC.

The symbols used on the internal connection diagram Fig. 1 are explained by the legend shown in Fig. 2.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

To the extent required the products described herein meet applicable ANSI, IEEE and NEMA standards; but no such assurance is given with respect to local codes and ordinances because they vary greatly.

The matrix blocks shown on the internal connections diagram of the SLA52H are connected by jumpers at the factory. These connections are used to implement the logic arrangement shown on the associated overall logic diagram. These matrix jumpers are listed on the associated option chart. A typical option chart for the Type SLA52H relay is shown in Fig. 3. Some of the matrix block connections may be customer options. These connections will then be shown as optional connections on the overall logic and must be selected by the user before the unit is placed in service.

The purpose of the contact converters (CC1, CC2, CC3, CC4) included in the Type SLA52H relay is to convert a contact operation into a signal that is compatible with the logic circuitry of the relay. When the external contact is closed, a +15 VDC signal is produced by the contact converter. The function of each contact converter depends upon the particular relaying scheme in which it is employed.

The Type SLA52H relay has provisions for up to 18 outputs suitable for driving a Type DLA data logging amplifier unit. Any matrix block point which is not used as a logic connection may be monitored by connecting a lead from the 411 or 421 socket to the block. If it is desired to monitor a matrix point which is used as a logic connection, wires 417 to 420 and 427 to 430 may be used. These points have two leads with taper tips which are used to replace the logic jumper. This provides the logic signal path and also a signal for the DLA unit. Any factory selected DLA points are listed on the option chart.

The Type SLA52H relay includes a contact interface between the relaying equipment and the associated channel.

CONSTRUCTION

The SLA52H relay is packaged in an enclosed metal case with hinged front covers and removable top cover. The outline and monitoring dimensions of the case and the physical location of the components are shown in Figs. 4 and 5 respectively.

The SLA52H relay contains printed circuit cards identified by a code number such as A111, T102, L104 where A designates auxiliary function, T designates time-delay function, and L designates logic function. The printed circuit cards plug in from the front of the unit. The sockets are marked with letter designations or "addresses" (D, E, F, etc.) which appear on the guide strips in front of each socket, on the component location drawing, on the internal connection diagram and on the printed circuit card. The test points (TP1, TP2, etc.) shown in the internal connection diagram are connected to instrument jacks on a test card in position T or AT with TP1 at the top of the AT card. TP10 is tied to +15 VDC through a 1.5K resistor. This resistor limits the current when TP10 is used to supply a logic signal.

Logic options in the SLA52H relay are selectable by means of jumper wires with taper tip pins on each end which are used to interconnect the matrix block points. These matrix blocks are located in the rear of the unit as shown in Fig. 5. The top cover of the relay must be removed to make the blocks accessible. The taper tip jumpers should be inserted and removed using the special tools which are supplied with each equipment. The green (G), black (B), white (W), violet (V), orange (O) and brown (BR) matrix blocks have 20 individual matrix points. The red (R) block has 20 points which are grouped in 10 pairs. The yellow (Y) block has 20 points, which are grouped in two sets of ten common points; Y1 to Y10 are connected to +15 VDC, Y11 to Y20 are connected to reference.

These relays will normally be supplied as a part of a static relay equipment, mounted in a rack or cabinet with other static relays and test equipment. Immediately upon receipt of a static relay equipment, it should be unpacked and examined for any damage sustained in transit. If injury or damage resulting from rough handling is evident, file a damage claim at once with the transportation company and promptly notify the nearest General Electric Sales Office.

Reasonable care should be exercised in unpacking the equipment. If the equipment is not to be installed immediately, it should be stored indoors in a location that is free from moisture, dust, metallic chips, and severe atmospheric contaminants.

Just prior to final installation the shipping support bolt should be removed from each side of all relay units, to facilitate possible future unit removal for maintenance. These shipping support bolts are approximately eight inches back from the relay front panel. Static relay equipment, when supplied in swing rack cabinets, should be securely anchored to the floor or to the shipping pallet to prevent the equipment from tipping over when the swing rack is opened.

INSTALLATION TESTS

If the SLA52H relay that is to be tested is installed in an equipment which has already been connected to the power system, disconnect the outputs in the associated Type SLAT relay from the system.

CAUTION

THE LOGIC SYSTEM SIDE OF THE DC POWER SUPPLY USED WITH MOD III STATIC RELAY EQUIPMENT IS ISOLATED FROM GROUND. IT IS A DESIGN CHARACTERISTIC OF MOST ELECTRONIC INSTRUMENTS THAT ONE OF THE SIGNAL INPUT TERMINALS IS CONNECTED TO THE INSTRUMENT CHASSIS. IF THE INSTRUMENT USED TO TEST THE RELAY EQUIPMENT IS ISOLATED FROM GROUND, ITS CHASSIS MAY HAVE AN ELECTRICAL POTENTIAL WITH RESPECT TO GROUND. THE USE OF A TEST INSTRUMENT WITH A GROUNDED CHASSIS WILL NOT AFFECT THE TESTING OF THE EQUIPMENT. A SECOND GROUND CONNECTION TO THE EQUIPMENT, SUCH AS A TEST LEAD INADVERTENTLY DROPPING AGAINST THE RELAY CASE, MAY CAUSE DAMAGE TO THE LOGIC CIRCUITRY. NO EXTERNAL TEST EQUIPMENT SHOULD BE LEFT CONNECTED TO THE STATIC RELAYS WHEN THEY ARE IN PROTECTIVE SERVICE, SINCE TEST EQUIPMENT GROUNDING REDUCES THE EFFECTIVENESS OF THE ISOLATION PROVIDED.

GENERAL

The SLA52H relay is supplied from the factory either mounted in a static relay equipment or as a separate unit associated with measuring relays, a Type SSA power supply, and some form of channel equipment. All relay units for a given terminal of static relaying equipment are tested together at the factory, and each unit will have the same summary number stamped on its nameplate.

Timers should be set for the operating and reset times indicated on the associated overall logic diagram. Where a time range is indicated on the overall logic diagram, the timer should be set for the value recommended for that function in the descriptive writeup accompanying the overall logic diagram. Where a setting depends upon conditions encountered on a specific application, this is so stated and the factors influencing the choice of setting are described. The procedure for checking and setting the timers is described in a later section.

OPERATIONAL CHECKS

Operation of the SLA52H unit can be checked by observing the signals at the twenty test points (TP1 to TP20) in the SLA52H by observing the operation of the associated channel equipment, or by observing the output functions in the associated Type SLAT tripping relay. The test points are located on two test cards in positions T and AT, and are numbered 1 to 20 from top to bottom. TP1 is the reference bus for the logic circuit; TP10 is at +15 VDC. The remaining points are located at various strategic points throughout the logic as shown on the internal connection diagram Fig. 1. Test point voltages can be monitored with a portable high impedance voltmeter, the voltmeter on the test panel of the associated equipment, or an oscilloscope.

Operation of any logic function may be checked by supplying the correct inputs to the card. This is accomplished by placing the card under test in a card extender, removing the cards which normally supply the input signals, and then connecting the card inputs to either TP10 or TP1. An output should be produced when the proper combination of inputs is supplied.

TEST CARD ADAPTER

The test card adapter provides a convenient means of gaining access to any pin of a particular card. Detailed information on the use of the test adapter card is included in the card instruction book GEK-34158.

TIMER ADJUSTMENTS AND TESTS

When the time-delay cards are to be adjusted or checked, an oscilloscope that can display two traces simultaneously and that has a calibrated horizontal sweep should be used.

In order to test the timer cards it is necessary to remove the card which supplies the input to the timer and to place the timer card in a card adapter. The card adapter allows access to the input and output of the timer if they are not brought out on test points. The timer test circuit is shown in Fig. 6. Opening the normally closed contact causes the output to step up to +15 VDC after the pickup delay of the timer. To increase the pickup time turn the upper potentiometer on the timer card clockwise; to decrease the time-delay setting of card, turn the upper potentiometer counterclockwise. If the timer card is provided with a variable reset delay, it can be adjusted by the lower potentiometer on the timer card (clockwise increases reset time).

OVERALL EQUIPMENT TESTS

After the SLA52H relay and the associated static relay units have been individually calibrated and tested for the desired settings, a series of overall operating circuit checks is advisable.

The elementary, overall logic, and logic description for the specific job will be useful for determining the overall operation of the scheme.

Overall equipment tests can be performed by applying AC current and voltages to the measuring units as specified in the instruction book for the measuring units and checking that proper outputs are obtained from the associated SLAT when the measuring units operate.

MAINTENANCE

PERIODIC TESTS

It should be sufficient to check the outputs produced at test points in the SLA52H when periodic calibration tests are made on the associated measuring units, for example the phase and ground relay in the line relaying scheme. No separate periodic tests on the SLA52H itself should be required.

TROUBLE SHOOTING

In any trouble shooting of equipment, it should first be established which unit is functioning incorrectly. The overall logic diagram supplied with the equipment shows the combined logic of the complete equipment and the various test points in each unit. By signal tracing, using the overall logic diagram and the various test points, it should be possible to quickly isolate the trouble.

A test adapter card is supplied with each static relay equipment to supplement the prewired test points on the test cards. Use of the adapter card is described in the card instruction book GEK-34158.

A dual-trace oscilloscope is a valuable aid to detailed trouble shooting, since it can be used in determining phase shift, operate and reset times as well as input and output levels. A portable dual-trace oscilloscope with a calibrated sweep and trigger facility is recommended.

SPARE PARTS

To minimize possible outage time, it is recommended that a complete maintenance program should include the stocking of at least one spare card of each type. It is possible to replace damaged or defective components on the printed circuit cards, but great care should be taken in soldering so as not to damage or bridge-over the printed circuit busses, or overheat the semi-conductor components. The repaired area should be recovered with a suitable high-dielectric plastic coating to prevent possible breakdowns across the printed busses due to moisture and dust. The wiring diagrams for the cards in the SLA52H relay are included in the card book GEK-34158.

NOTES


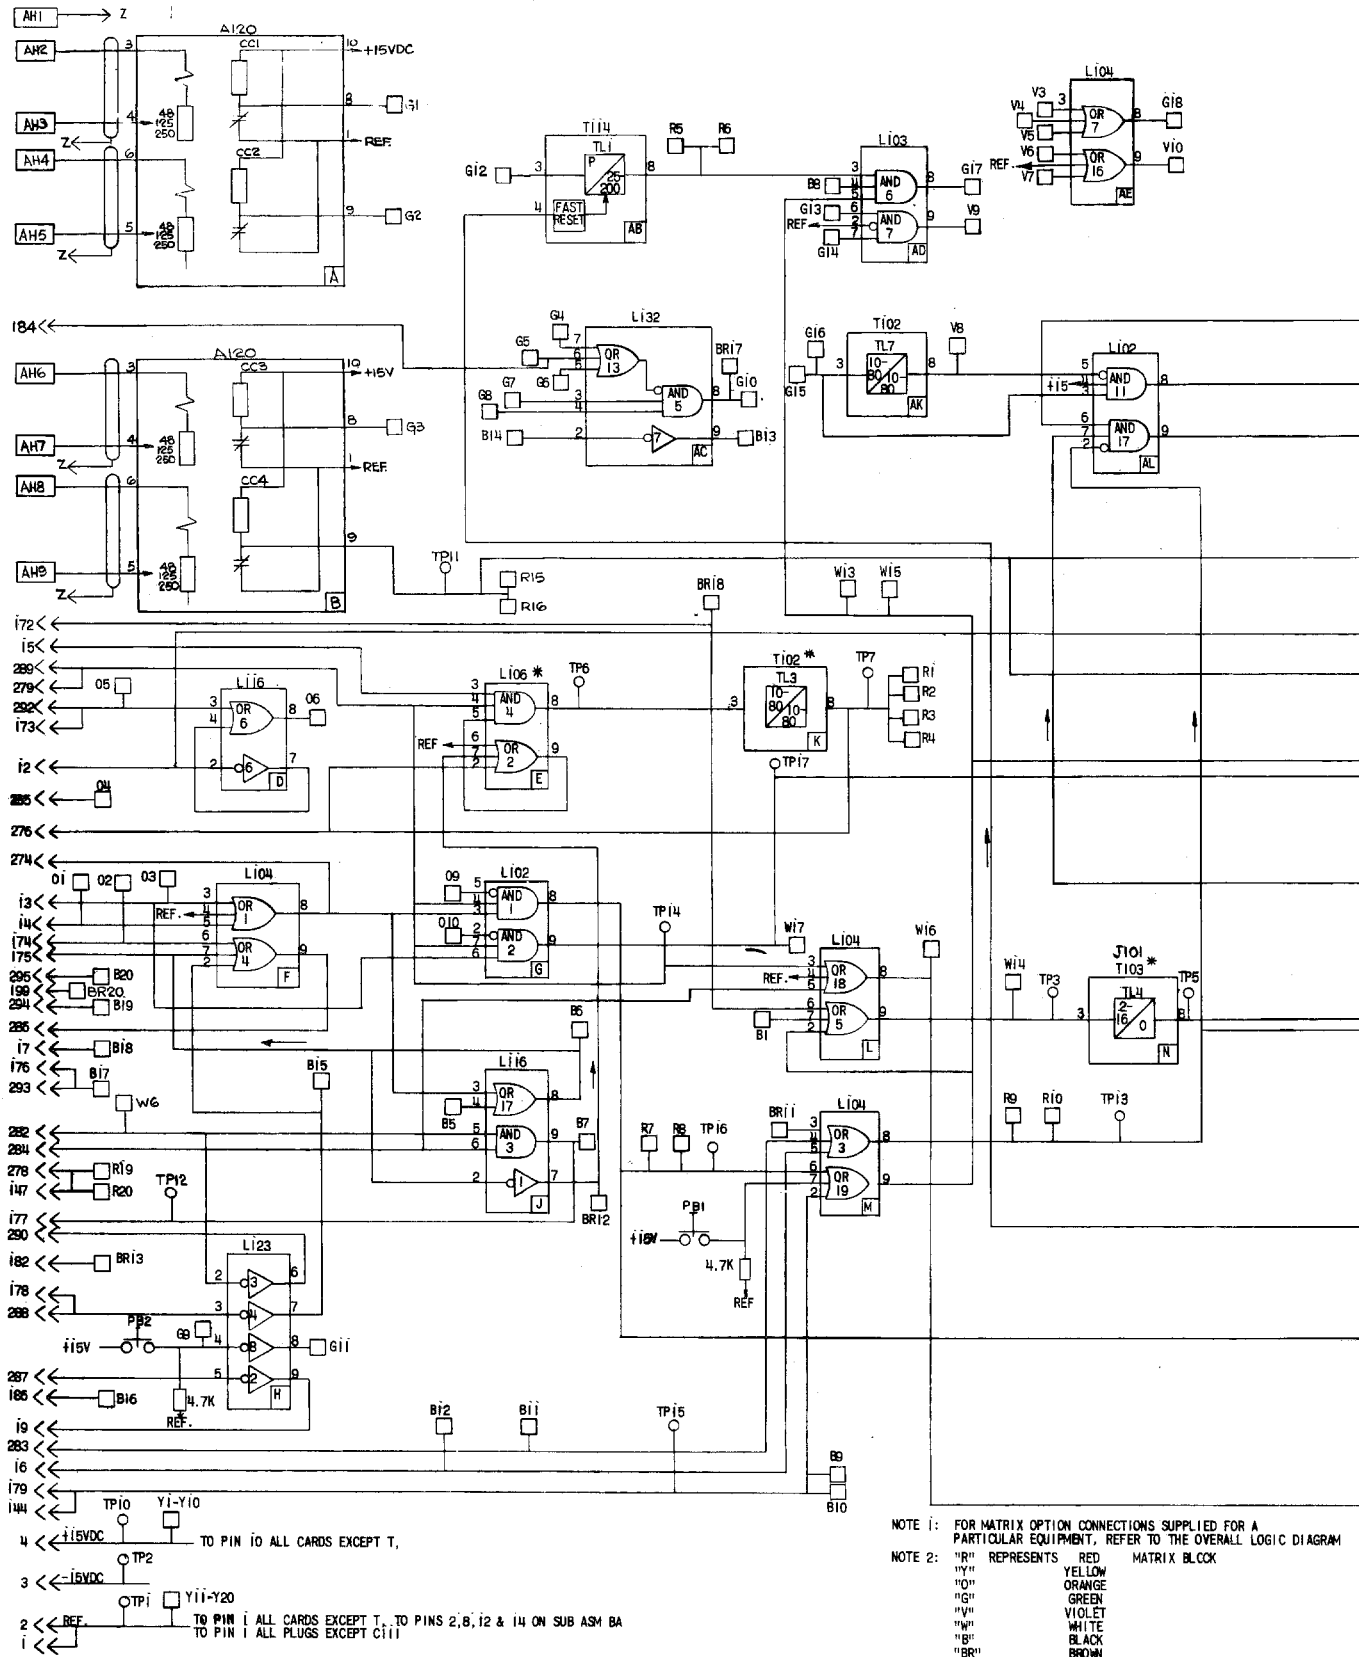


Fig. 1 (0136D3539-1) Internal Connect

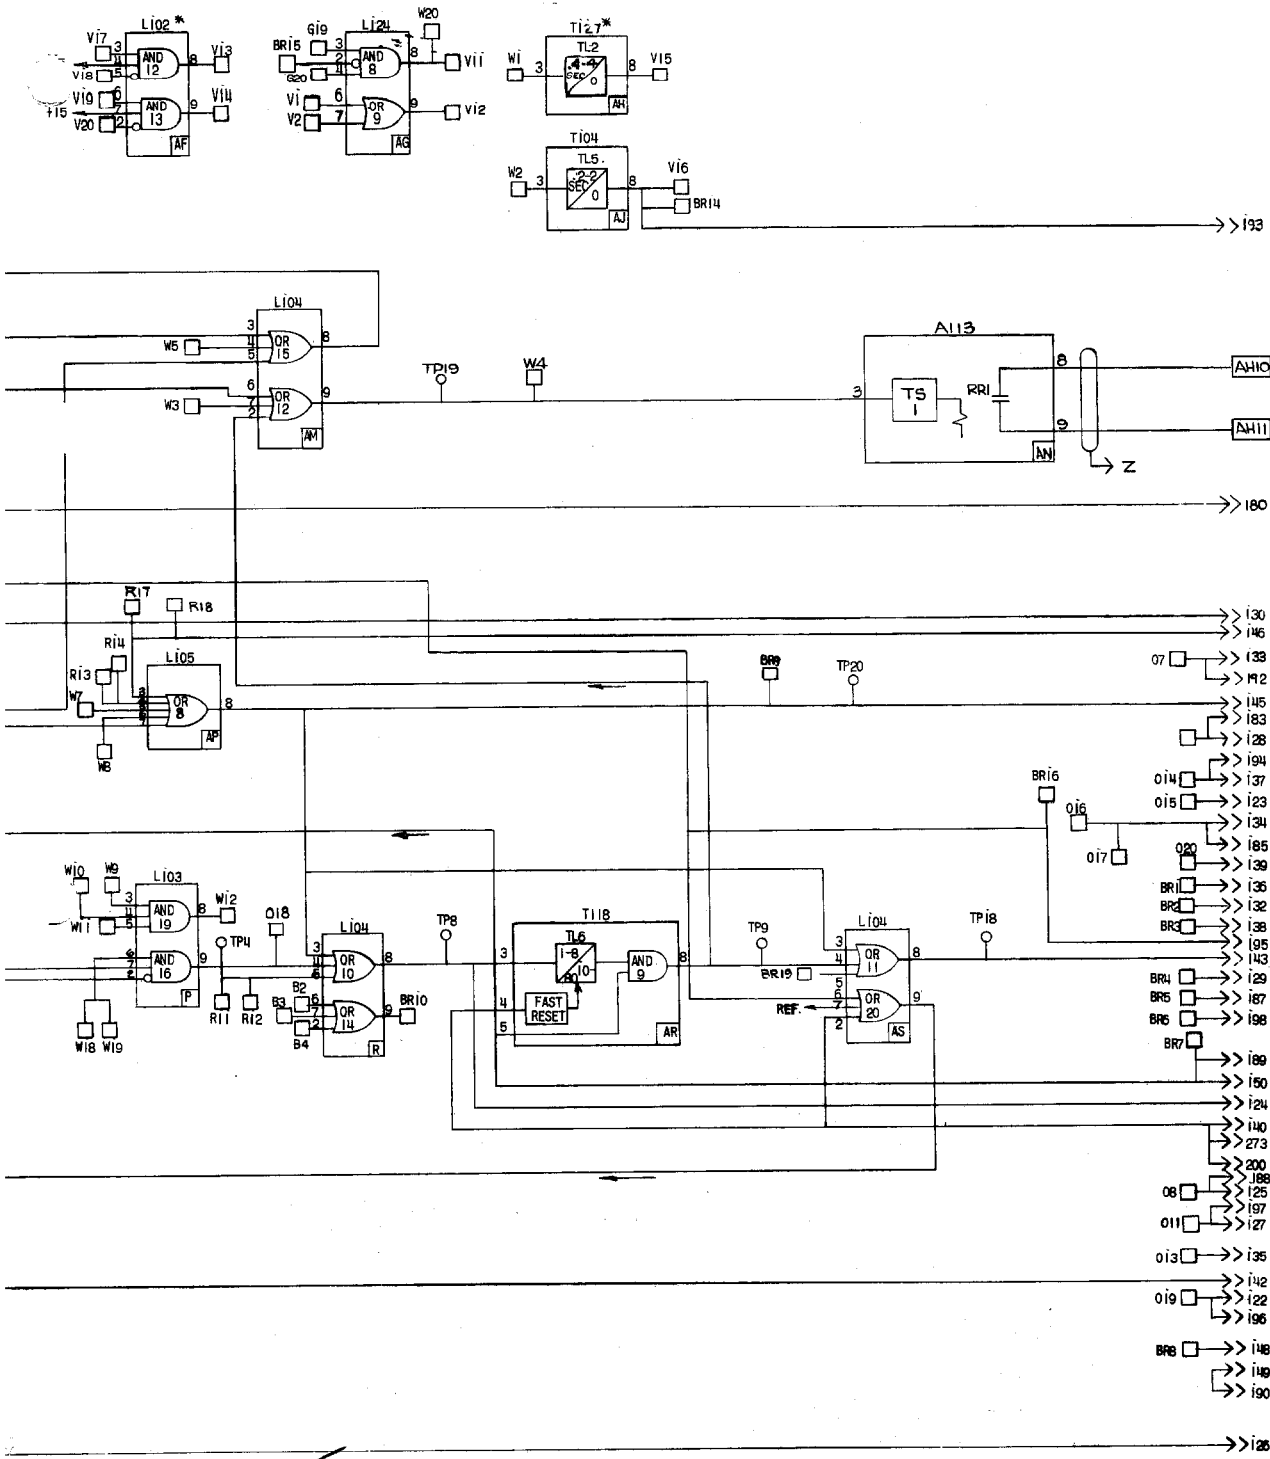

* - OPTIONAL CARDS

UNIT	E	K	N	AF	AH
SLAS2H1	-	f	J101	-	T127
SLAS2H2	LI06	T102	J101	-	-
SLAS2H3	LI06	T102	J101	-	T127

ons Diagram for the Type SLAT52H

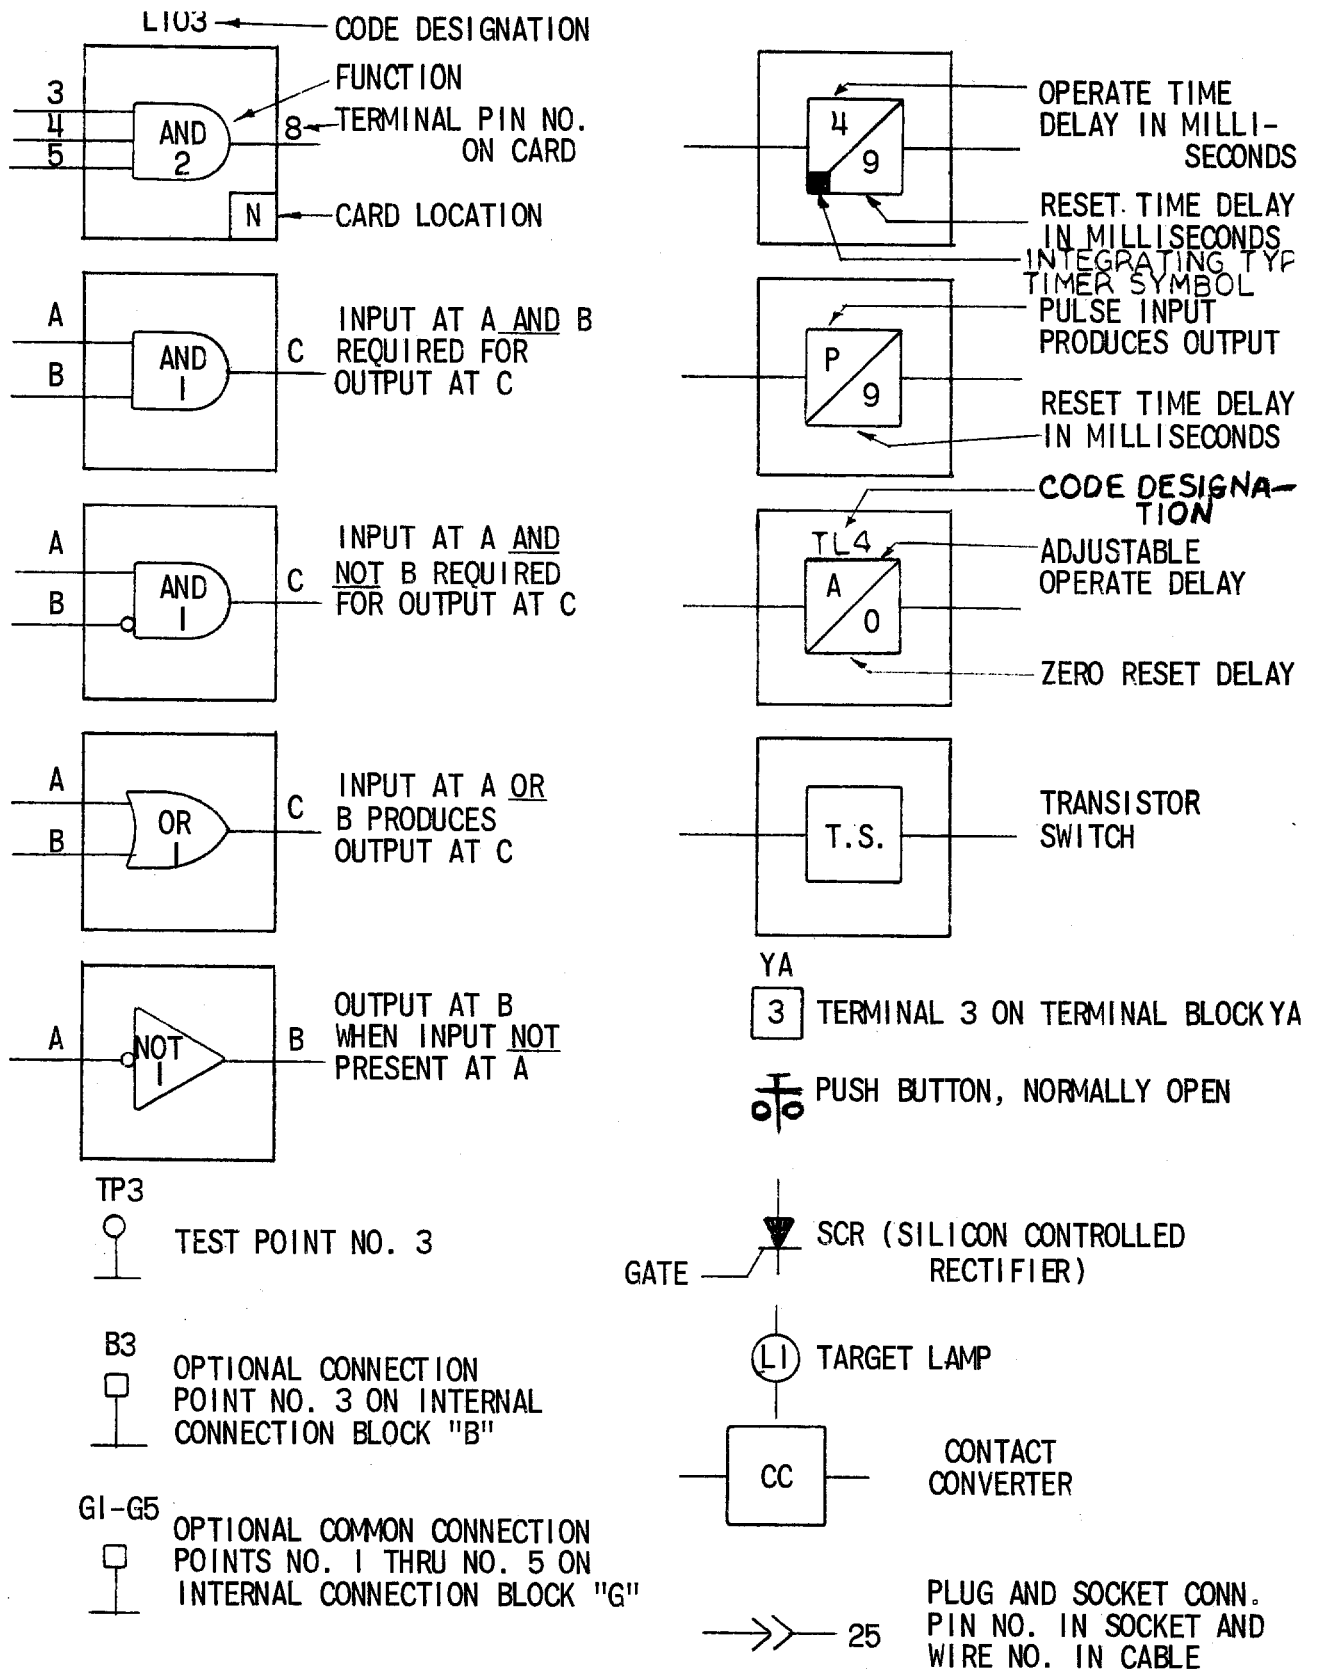


Fig. 2 (0227A2047-1) Internal Connection Diagram Legend

THE FOLLOWING ARE FACTORY CONNECTIONS MADE AT THE MATRIX BLOCKS INSIDE OF THE SLA RELAY ASSOCIATED WITH THIS EQUIPMENT.

SYMBOLS LISTED: PL=RELAY INTERCONNECTING CABLE LEAD
 (S)=LOGIC FUNCTION CARD PIN NUMBER
 ‡=3-WAY CONNECTION. USE JUMPER 0229A2024 G-2
 * =DLA MONITOR CONNECTION AVAILABLE BUT NOT USE!

126

MATRIX BLOCK JUMPERS		LOGIC FUNCTION		MATRIX BLOCK JUMPERS		LOGIC FUNCTION	
FROM	TO	FROM	TO	FROM	TO	FROM	TO
B18	BR12	PL17	NOT1	B7	B9	AND3	OR19
B12	PL416	M1B	DLA	020	R10	PL139	OR3
010	PL416	M1B	DLA	R2	PL418	M0B	DLA
04	PL419			B2	R1	OR14	PL276
W8	PL419			‡ G2	BR11	CC2	OR3
B11	PL417	D2B	DLA	‡BR11	B3	OR3	OR14
B19	R13	PL294	OR8	BR18	Y16	OR5	REF.
R14	PL413	I2T	DLA	W17	PL412	(M1)1	DLA
BR16	015	PL12	PL123	W14	BR1	OR5	PL136
06	G8	OR6	AND5	‡ W7	Y17	OR8	REF.
02	Y11	OR4	REF.	018	PL414	COMPARER	DLA
R15	G15	CC4	TL7	‡ W3	Y17	OR12	REF.
W18	G16	AND16	TL7	W4	BR3	OR12	PL138
G7	Y1	AND5	+15V	B8	Y3	AND6	+15V
G4	V8	OR13	TL7	09	Y18	AND1	REF.
G5	Y12	OR13	REF.	B4	‡Y19	OR14	REF.
G6	Y13	OR13	REF.	016	BR8	PL134	PL148
BR17	B1	AND5	OR5	014	017	PL137	PL134
G10	PL415	AND5(WI)	DLA	BR19	Y20	OR11	REF.
W5	Y14	OR15	REF.	012	Y4	PL128	+15V
BR4	W13	PL129	OR19	R11	‡Y20	OR10	REF.
‡BR10	013	OR14	PL135	R19	‡Y19	AND35	REF.
‡BR10	019	OR14	PL122				
W16	G14	OR18	AND7				
G1	G12	CC1	TL1				
R6	G13	TL1	AND7				
R5	B5	TL1	OR17				
W2	R7	TL5	AND1				
BR14	PL420						
V1	V16	OR9	TL5				
V2	Y15	OR9	REF.				
V12	V3	OR9	OR7				
G17	V4	AND6	OR7				
V9	V5	AND7	OR7				
G18	R17	OR7	OR8				
BR2	R18	PL132	OR8				

MADE BY / / A APPROVALS / /

Fig. 3 (0227A2050-1-SH126) Typical Option Chart for the Type SLA52H


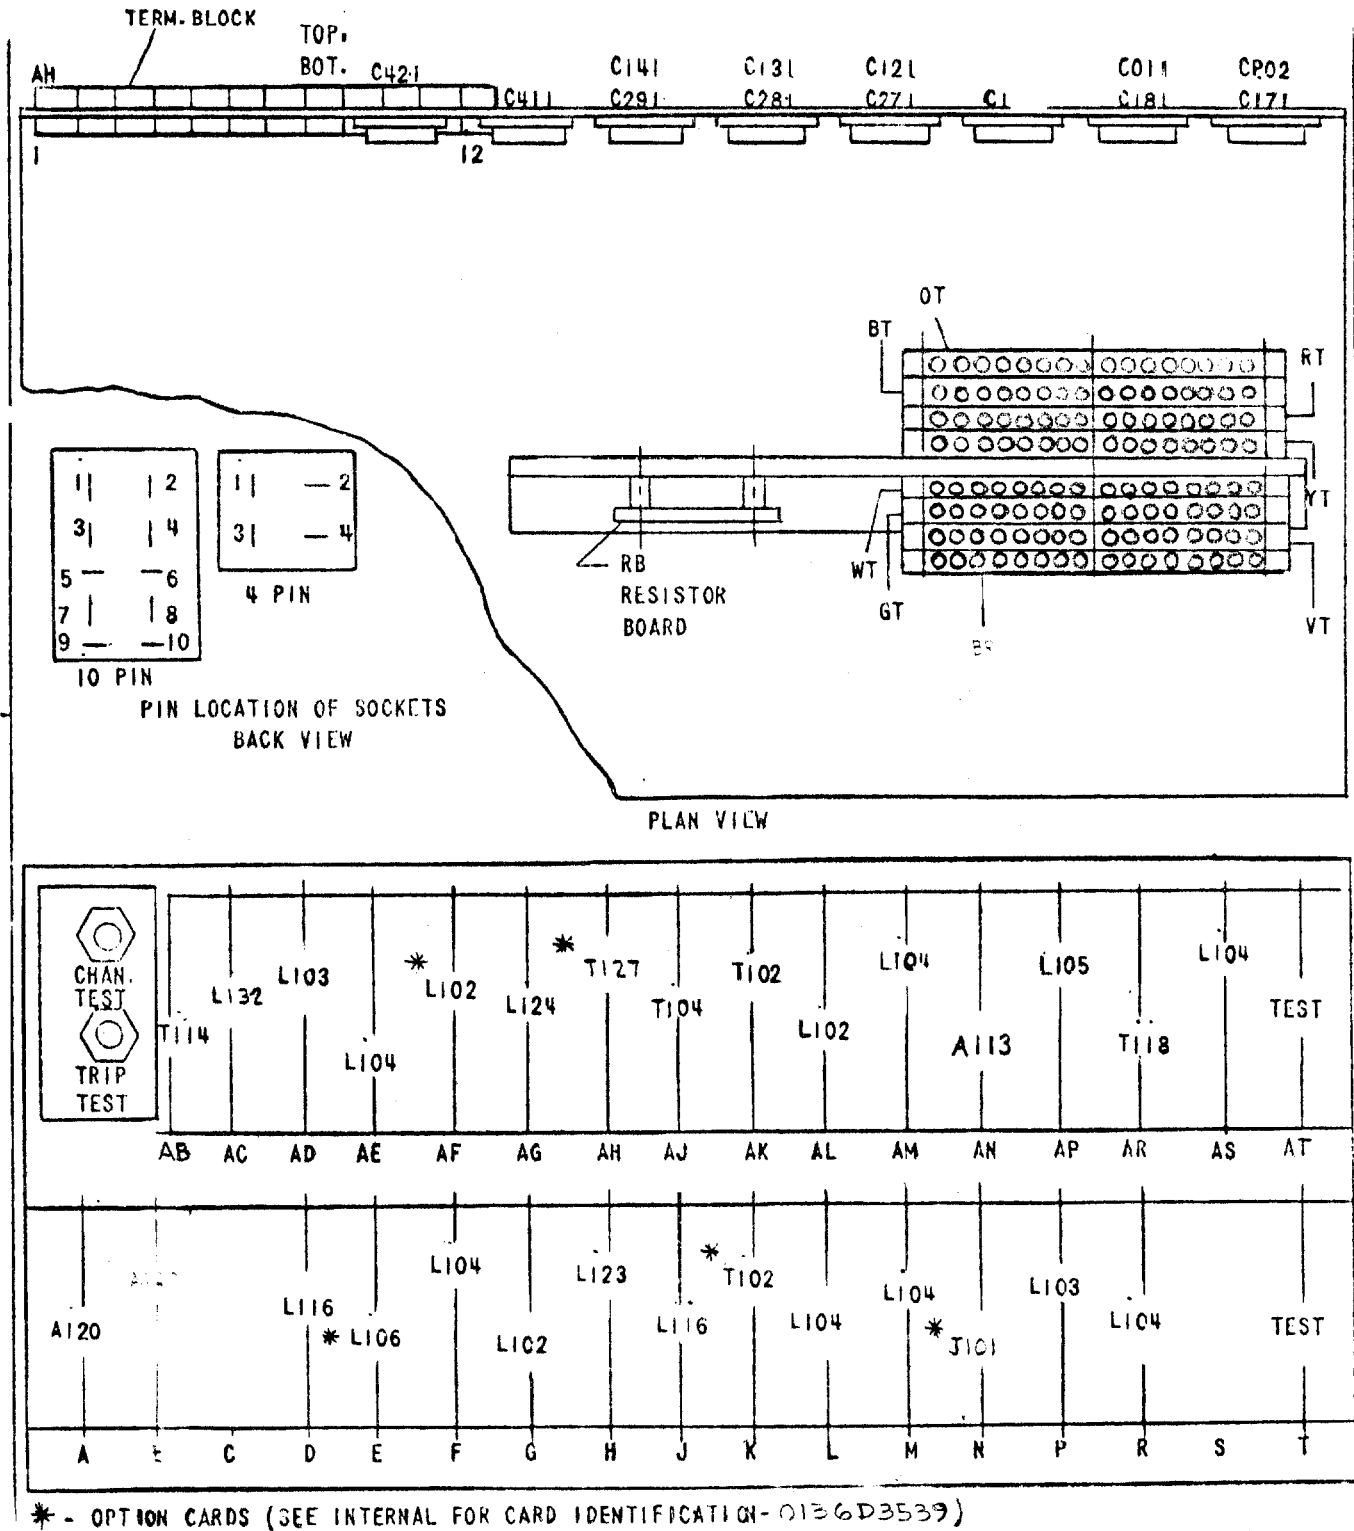


Fig. 5 (0269A3132-0) Component and Card Locations for the SLA52H Relay

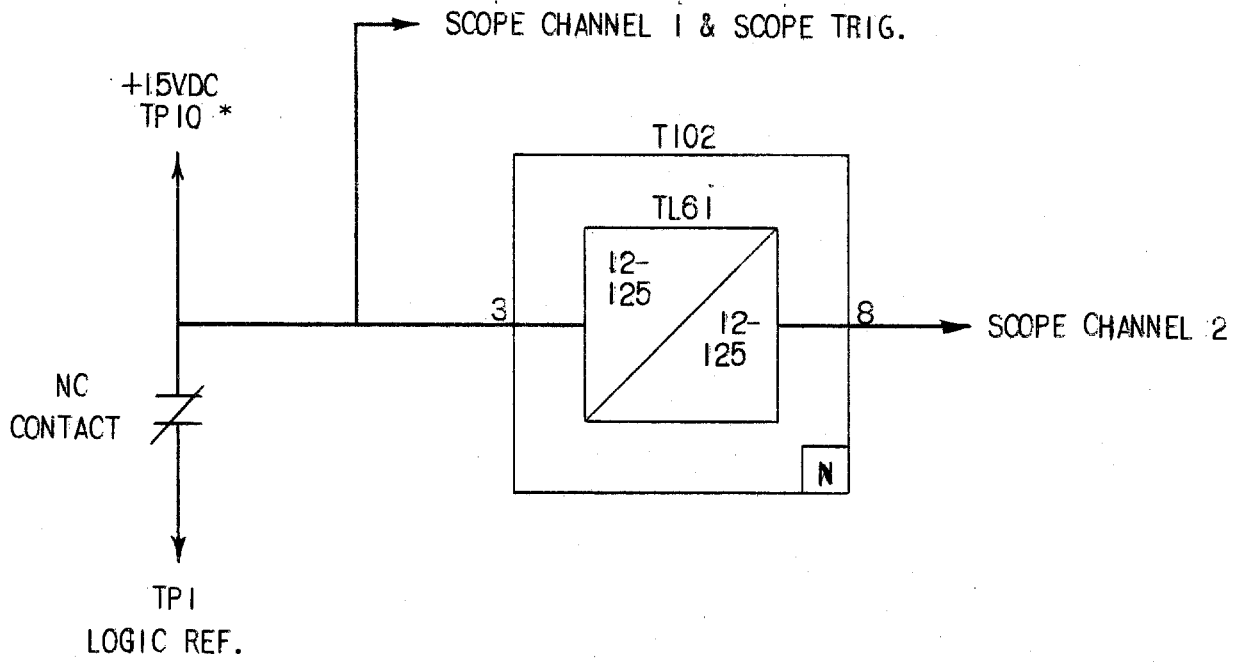

* THE 1.5VDC SIGNAL AT PIN 10 HAS A CURRENT LIMITING RESISTOR MOUNTED ON THE TEST CARD.

Fig. 6 (0246A7987-0) Logic Timer Test Circuit

**GENERAL ELECTRIC COMPANY
POWER SYSTEMS MANAGEMENT BUSINESS DEPT.
PHILADELPHIA, PA. 19142**

GENERAL  ELECTRIC